

ORDER NO. ARP2434

MULTI-PLAY COMPACT DISC PLAYER

PD-M501 PD-M551 PD-M501

PD-M601, PD-M551 AND PD-M501 HAVE THE FOLLOWING:

-		Model		Bauer Baruiraman	
Туре			PD-M501	Power Requirement	Remarks
KU	0	0	0	AC120V only	
KUXJS	0	0	0	AC120V only	
KC	0	-	0	AC120V only	
KCXJS	0	-	0	AC120V only	
WEMXJS	0	-	0	AC220V-240V	
WBXJS	0	-	-	AC220V-240V	
RD	_	-	0	AC110-127V, 220-240V (switchable)	
WPW	-	-	0	AC220V-240V	

- ◆ This manual is applicable to the following: PD-M601/KU, KUXJS, KC and KCXJS; PD-M551/KU and KUXJS; PD-M501/KU, KUXJS, KC and KCXJS.
- ◆ For the following: PD-M601/KUXJS, KC and KCXJS; PD-M551/KU and KUXJS; PD-M501/KU, KUXJS, KC and KCXJS, refer to page 39.
- For the other types, refer to applicable service manuals.

CONTENTS

1. SAFETY INFORMATION	ADJUSTMENTS
4. IC INFORMATION	KUXJS, KC AND KCXJS TYPES
6. P.C.BOARDS CONNECTION DIAGRAM······· 19 7. PCB PARTS LIST······ 25	11. SPECIFICATION43

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5).

When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.

1. SAFETY INFORMATION


(FOR USA MODEL ONLY)-

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals. screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

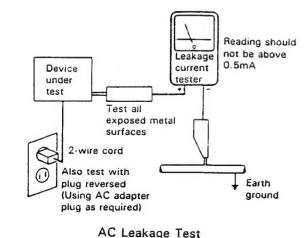

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A PO-TENTIAL SHOCK HAZARD AND MUST BE COR-RECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection no: the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a $\, \Delta \,$ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which dose not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock. fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

(FOR EUROPEAN MODEL ONLY)

AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.

-ADVERSEL: USYNLIG LASERSTRÅLING VED ÄBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION UNDGA UDSAETTELSE FOR

STRALING

VARNING! OSYNLIG LASERSTRÄLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD, BETRAKTA EJ STRÅLEN.

Avattaessa ja suojalukitus ohitetta-essa olet alttiina näkymättömälle lasersateilylle. Alä katso sateeseel

VARNING!

synlig lasersträlning när denna de

WEMXJS type

LASER Kuva 1 Lasersateilyn varoitusmerkki

DEVICE INCLUDES LASER DIODE WHICH EMITS INVISIBLE INFRARED RADIATION WHICH IS DANGEROUS TO EYES, THERE IS A WARNING SIGN ACCORDING TO PICTURE 1 INSIDE THE DEVICE CLOSE TO THE LASER



Picture 1 Warning sign for laser radiation

MPORTANT

THIS PIONEER APPARATUS CONTAINS LASER OF CLASS 1. SERVICING OPERATION OF THE APPARATUS SHOULD BE DONE BY A SPECIALLY INSTRUCTED PERSON

- LASER DIODE CHARACTERISTICS MAXIMUM QUITPUT POWER: 5 mm WAVELENGTH: 780-785 nm

LABEL CHECK (MULTI MAGAZINE type)

WEMXJS type

ADVARSEL SYNLIG LASERSTRALING VED ABNING RE ER UDE AF FUNKTION. VORSICHT

INSICHTBARE LASER-STRAHLUNG TRITT AUS. WEIGH DECID

WBXJS type

CAUTION INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM PRW1018

Additional Laser Caution

Laser Interlock Mechanism

The ON/OFF (ON: low level, OFF: high level) status of the LPS1 (S601) and LPS2 (S602) switches for detecting the loading state is detected by the system microprocessor, and the design prevents laser diode oscillation when both switches LPS1 and LPS2 are not ON (low level) (clamped

Thus, interlock will no longer function if switches LPS1 (S601) and LPS2 (S602) are deliberately shorted.


The interlock also does not operate in the test mode * . Laser diode oscillation will continue, if pins 1 and 2 of M51593FP (IC101) on the preamplifier board loaded on pick up assembly are connected to GND, or pin 19 is connected to low level (ON), or else the terminals of Q101 are shorted to each other (fault condition).


When the cover is opened with the servo mechanism block removed to be turned over, close viewing of the objective lens with the naked eye will cause exposure to a Class 1 laser beam. '92 M1

* : Refer to page 28.

CLASS ASER PRODUCT WEMXJS and **WBXJS** types

WEMXJS and WBXJS types

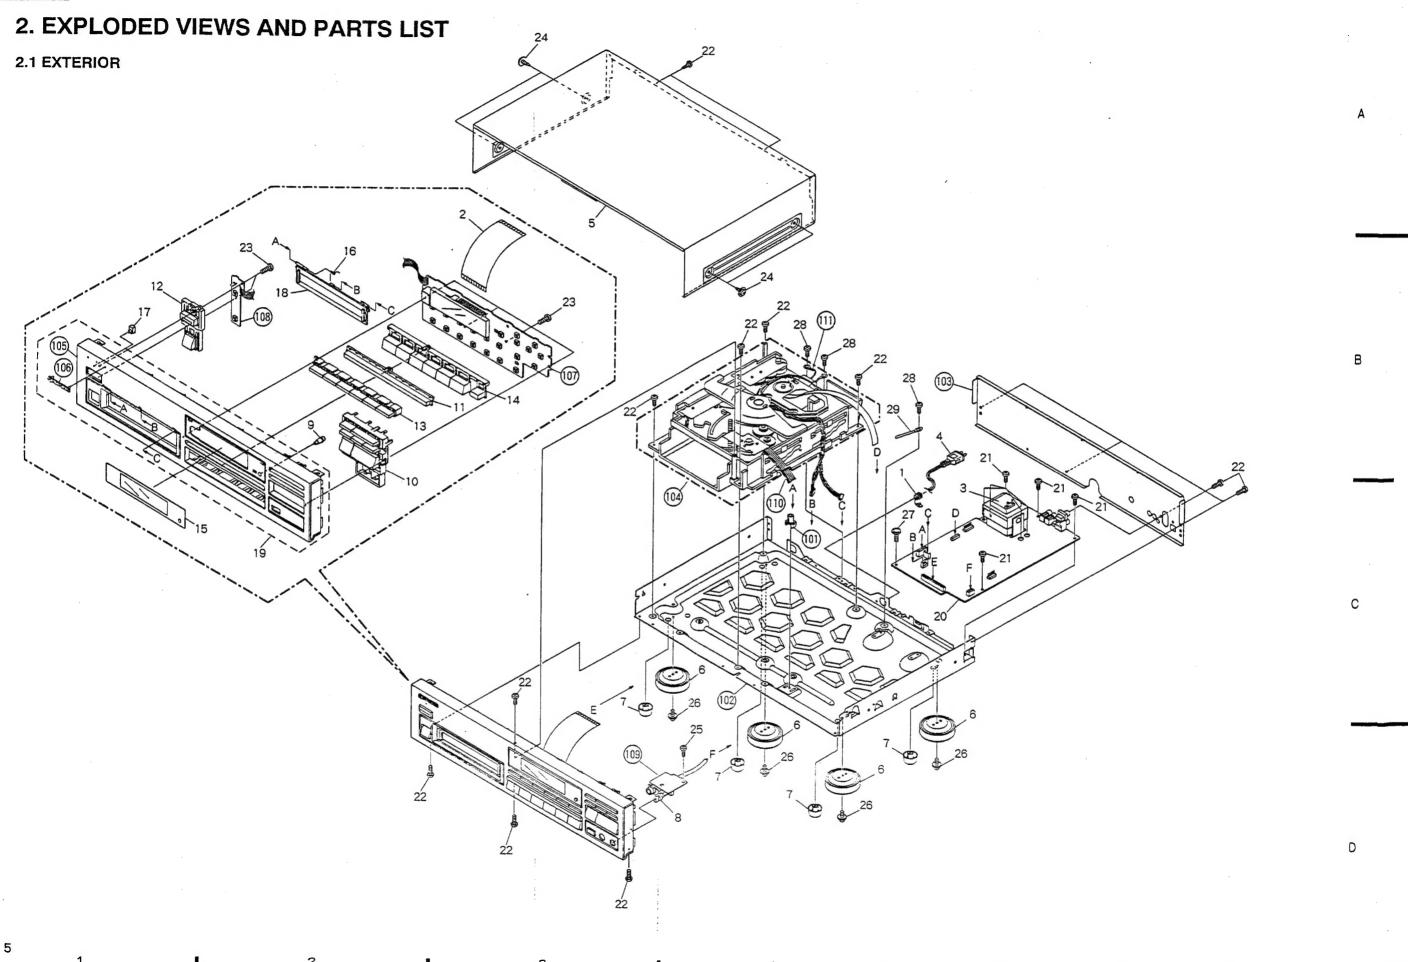

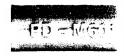


NOTES:

- The parts with an encircled number are generally unavaliable because they are not in our Master Spare Parts List.
 The ∆ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

 • Parts marked by "• " are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Parts List


<u>Mark</u>	No.	Description	Part No.	Mark	No.	Description	Part No.
Δ	1	Strain relief	CM-22		101	PCB mould	AMR1525
	2	32P F.F.C /30V	PDD1125		102	Under base	PNA1751
$\stackrel{\Delta}{\Delta}$	3	Power transformer	PTT1235		103	Rear base	PNA1752
Δ	4	Power cord with plug	RDG1010		104	Multi mechanism assembly	PXA1429
	5	Bonnet	PYY1149		105	Function panel	PNW2139
	6	Insulator (For PD - M601, M551)	PNW1912		106 107	Name plate Function board assembly	PAM1407 PWZ2291
	7	Leg assembly (For PD-M501)	PXA1201		108 109	Switch board assembly Headphone board assembly	PWZ2296 PWZ2300
	8	Knob (Headphone)	PAC1370		110 111	Flat cable (6P) Earth lead unit	D20PYY0615E XDF-502
	9	Time button B	PAC1549		111	Laith lead difft	ADF - 302
	10	Play button A	PAC1633				
	11	Fix button	PAC1639				
	12	Power button A	PAC1642				
	13	Disc button	PAC1643				
	14	Program button	PAC1646				
	15	Display window	PAM1550				
	16	Spring(Door)	PBH1022				
	17	LED lens	PNW2019				
	18	Door	PNW2138				
	19	Function panel assembly	PEA1195				
\odot	20	Mother board assembly	PWM1583				
	21	Screw	BBZ30P060FMC				
	22	Screw	BBZ30P080FZK				
	23	Screw	PPZ30P120FMC				
	24	Screw	FBT40P080FZK				
	25	Screw	IBZ30P060FCC				
	26	Screw	IBZ30P100FCC				
	27	Screw	IBZ30P180FMC				
	28	Screw	PDZ30P050FMC				
	29	Cord clamper	RNH-184				

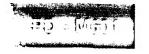

2.2 MULTI MECHANISM ASSEMBLY

Parts List

Mark	No.	Description	Part No.	Mark No.	Description	Part No.
	1	Motor pulley	PNW1634	49	Guide bar	PLA1094
	2	Gear holder	PNW1929	50	Disc table	
	3	• • • • •		51		PNW1067
	4	Cam gear	PNW1923		Gear 1	PNW2052
	5	Belt		52	Gear 2	PNW2053
	3	Dell	PEB1138	53	Gear 3	PNW2054
	6	Top guide	PNW1914	54	Pinion gear	PNW2055
	7	Gear pulley	PNW1918	55	PWB holder	PNW2057
	8	Gear S	PNW1919	56	Carriage DC motor / 0.3W	PXM1027
	9	Gear L	PNW1920	57	D.C. motor assembly	PEA1207
	10	Eject spring	PBH1107		(spindle with oil)	
	11	Switch lever	PNW1927	58	Pickup assembly	PEA1179
	12	Seven bar	PNW1931	59	Disc table assembly	PEA1035
	13	Sub rotary lever	PNW1933	60	Screw	
	14	Sub rotary lever spring	PBH1111	61	Screw	BBZ26P060FMC
	15	Rotary lever	PNW1932	62	Screw	BPZ20P060FMC BPZ26P100FMC
	16	Drive plate	PNW1930	63	Screw	
	17	Motor screw	PBA-112	64		JFZ17P025FZK
	18	Holder lever spring	PBH1110		Screw	JFZ20P040FMC
	19	Disc holder		65	Washer	WT12D032D025
	20	Cushion A	PNW1924			
	20	Cusnion A	PED1001			
	21	Holder lever	PNW1925	101	Motor	VXM1033
	22	Float rubber	PEB1014	102	Eject lever	
	23	Float rubber	PEB1132	103		PNB1306
	24	Float screw	PBA1055	103	Upper chassis	PNB1267
	25	Release lever	PNW1934	. 104	Servo mechanism assembly M	PXA1417
	26	Release spring	PBH1106	105	Loading board assembly	Divitaces
	27	Clamper cam	PNW1922	106	Cub about assembly	PWZ2038
	28	Clamper holder	PNW1921		Sub chassis	PNW2027
	29	Clamper spring	PBH1109	107	Rubber tube	PEB1171
	30			108	Main chassis	PNW2026
	50	Clamper	PNW1857	109	Select board assembly	PWZ2039
	31	Lock lever	PNW1917	110	Motor board assembly	PWZ2040
	32	Lock spring	PBH1108	111	Mechanism board assembly	
	33	Stair L	PNW1915	112	Earth lead unit	PWX1192
	34	Stair R	PNW1916	113		PDF1118
	35	Synchronize lever	PNW1926		Clamp magnet	PMF1014
		Cynomical level	114W1920	114	Gear stopper	PNB1303
	36	Motor assembly	PEA1130	115	Yoke M	PNB1312
		(LOADING, DISC SELECT))	116	AV angle	PNB1405
	37	Screw	PMZ26P040FMC	117	Carriage base	
	38	Screw	PPZ30P080FMC	11,	Carriage base	PNW2058
	39	Screw	BBZ30P060FMC			
	40	Washer	WT26D047D025			
	41	Washer	WA31D054D025			
	42	E ring	Z39-010			
	43	Screw	IPZ30P080FMC			
	44	Rubber spacer	PEB1178			
	45	Rubber spacer	PEB1179			
	45					
	47	Silent ring Washer	PBK1093			
			WA62D130D025			
	48	Earth spring	PBH1132			

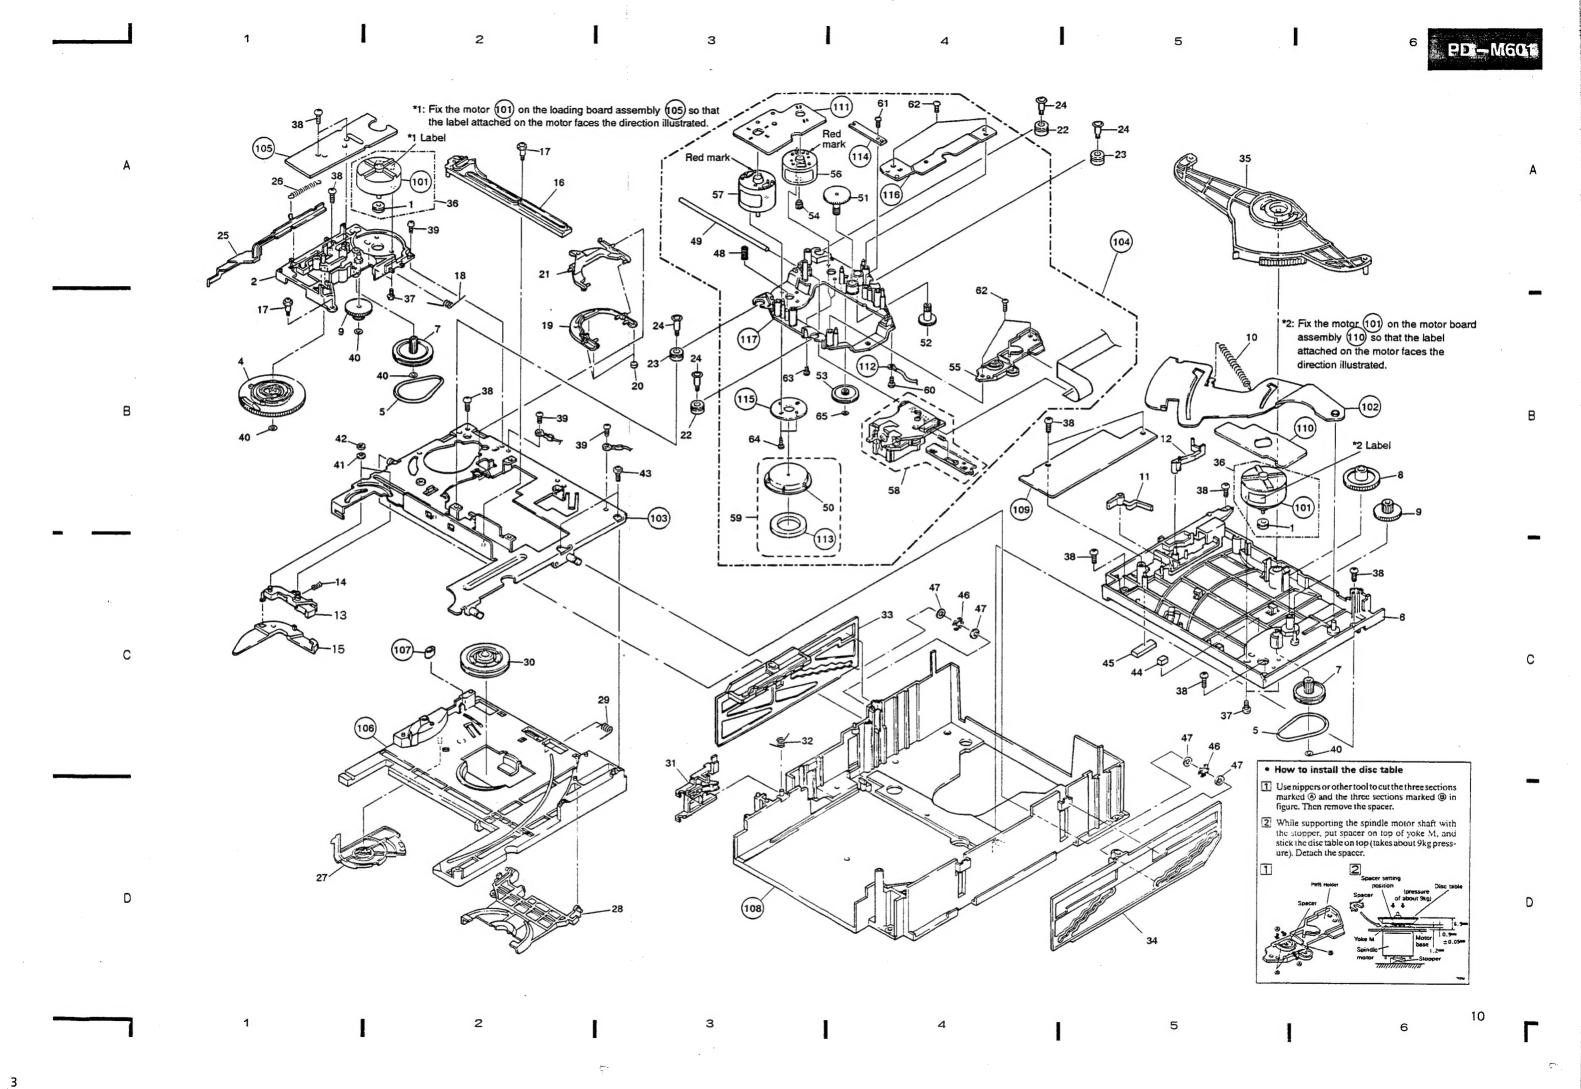




3. PACKING

Parts List

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	Connection cord with mini plug	PDE-319		9	CD packing case	PHG1753
	_		222444		10	Mirror mat sheet	Z23-007
	2	Connection cord with pin plug	PDE1109		11	PP case	PYY1141
	3	Remote control unit	PWW1068				
	4	Battery cover	PZN1010				
					101	Dry cell battery(R03, AAA)	VFM-022
	5	Magazine assembly	PXA1308			2.) ************************************	V 12111 022
	6	Operating instructions (English)	PRB1166				
	7	Styrol protector (F)	PHA1198				
	8	Styrol protector (R)	PHA1199			•	

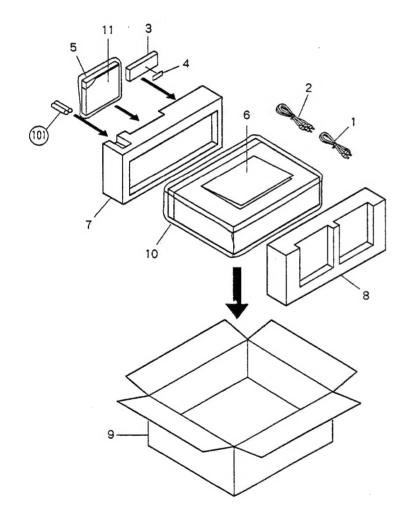

4. IC INFORMATION

PD4396B (IC351) System control

Pin Function

No.	Mark	Pin Name	1/0	Function	No.	Mark	Pin Name	1/0	Function
1	RESET	REST		CPU reset (L: reset)	33	P02/S0	DATA	0	Serial output of LSI control data
2	T0	DG1			34	P03/S1	sqso	1	Serial input of subcode Q data
3	T1	DG2			35	P10/INT	RMDT	1	Remote control data input
4	T2	DG3			36	P11	SCOR	1	Subcode synch. S0 + S1 input
5	T3	DG4			37	P12	INSD	1	Slider inside SW input (L : INSIDE)
6	T4	DG5	0*	DIGIT output for FL drive	38	P13	FCOK	1	Focus OK input (H: OK, L: NG)
7	T5	DG6		Digit output for PL drive	39	P20	LIN		
8	T6	DG7			40	P21	LOUT	0	Disc tray IN / OUT *1
9	17	DG8			41	P22	DSDW		_
10	T8	DG9			42	P23	DSUP	0	Disc selector UP/DOWN *2
11	T9	DG10			43	P30	LPS2		
12	PH3	MUTE	0	Muting output (L: Mute, H: OFF)	44	P31	LPS1	1	Load position SW input *3
13	PH2	SYC3	0	Synchro output	45	P32	DCNT		Disc selector count pulse *4
14	PH1			NC (Not used.)	46	P33	DCHM	1	Disc selector home *4
15	PHO	STBL	0	Standby LED output (L : Goes off, H :Light),	47	P60	MZS2	ı	Magazine discrimination *5
16	511	SL	0*	SECMENT	48	P61	MZS1		SW input
17	\$10	SK	U.	SEGMENT output for FL drive	49	P62	SENS	1	Multi mode input of LSI operation state
18	VLOAD			- 26V	50	P63	GFS	1	Frame sync. lock input (H: OK, L: NG
19	VPRE			- 5V	51	P40	MUTE		Muting output (H: Mute, L: OFF)
20	\$9	SJ			52	P41	DLAT		Latch pulse for D/A converter IC
21	\$8	SI			53	P42	XLAT	0	Latch pulse of LSI control data
22	\$7	SD	0*	CECNENT	54	P43	XRST		LSI reset (L: Reset, H: Release)
23	\$6	sc	O-	SEGMENT output for FL drive	55	PP0	LDON		Laser diode output (H: OFF, L: ON)
24		SB			56	X1	X1		
25	\$4	SA			57	X2	X2		Main system clock oscillation
26	VDD	VDD		+5V	58	vss	VSS		GND
27	S3	SH			59	XT1			GND (Not used.)
28	\$2	SG	0*	SECMENT output for El debre	60	XT2			NC (Not used.)
29	S1	SF	U	SEGMENT output for FL drive	61	P50	KD0/TEST		Key scan input and TEST mode required input
30	SO	SE			62	P51	KD1		
31	P00	SYNC1	1	Synchro input	63	P52	KD2	1	Key scan input
32	SCK	CLOK	0	Serial clock	64	P53	KD3		ney scan input

O*: Output terminals with pull-down resistor.

*1 : Loading selector

Tray	LOUT	LIN
OUT STOP	L H L	H L L

2	: Disc	selector	UP	/ DOWN
---	--------	----------	----	--------

2 - 2 - 2 - 2 - 3 - 3	01 , 00	
Selector	DSDW	DSUP
UP DOWN STOP	L H	H L
3106	L	L

*3 : Loading position SW

	LPS1	L PS2
CLAMP	L	L
LOADING	L	Н
HOME	Н	Н
EJECT	Н	L

*4 : DISC select

	DCNT	DCHM
2 - 6 DISC HOME During select	L L H	H

*5 : Magazine discrimination

	MZS1	MZS2
Magazine OUT	Н	*
IN MULTI	L	н
IN SINGLE	L	L

5. SCHEMATIC DIAGRAM

5.1 Waveforms

(RF)

(RF)

TP1-Pin 1:PLAY MODE

500mV/div 500nsec/div

TP1-Pin 1:TRACK SEARCH MODE

500mV/div 200 µ sec/div

TP1-Pin 6:PLAY MODE

TP1-Pin 2:PLAY MODE

TP1-Pin 2:50T-JUMP (*1) MODE

2000年的日本

1V/div 1msec/div

10msec/div

(FOER)

(TRER)

(TRER)

Note: The encircled numbers denote measuring points in the schematic diagram.

- GND

- GND

- GND

- GND

- GND

(6)

(6)

- *1 50T-JUMP: After switching to the pause mode, press the manual search key.
- *2 FOCUS-IN:Press the key without loading a disc.

- GND

- GND

- GND

- GND

- GND

(9)

IC202-Pin 3 :FOCUS-IN (*2) MODE

(FODR)

(5) (FODR)

1V/div

(TRDR)

(TRDR)

500mV/div 1msec/div

IC201 - Pin 9:PLAY MODE

(SPDR) 1V/div 50msec/div

500mV/div

1V/div 200msec/div

IC202-Pin 3 :PLAY MODE

IC202-Pin 4:PLAY MODE

1msec/div

IC202-Pin 4:50T-JUMP (*1) MODE


IC201 - Pin 9:TRACK SEARCH MODE (7) (SPDR) 2V/div 50msec/div - GND IC202-Pin 9 :PLAY MODE (8) (CADR) 1V/div 2sec/div – GND IC202-Pin 9 :TRACK SEARCH MODE (CADR) 2V/div 200msec/div - GND IC151-Pin 32:PLAY MODE (EFM) 2V/div 500nsec/div – GND IC401 - Pin 9:PLAY MODE (1kHz) (LO) (D/A DATA OUT) 1V/div 200 µ sec/div

- GND


*3 POWER ON:Plug AC cord into AC wall socket.


IC401 - Pin 10:PLAY MODE (1kHz)

*4 POWER OFF: Unplug AC cord form AC wall socket.

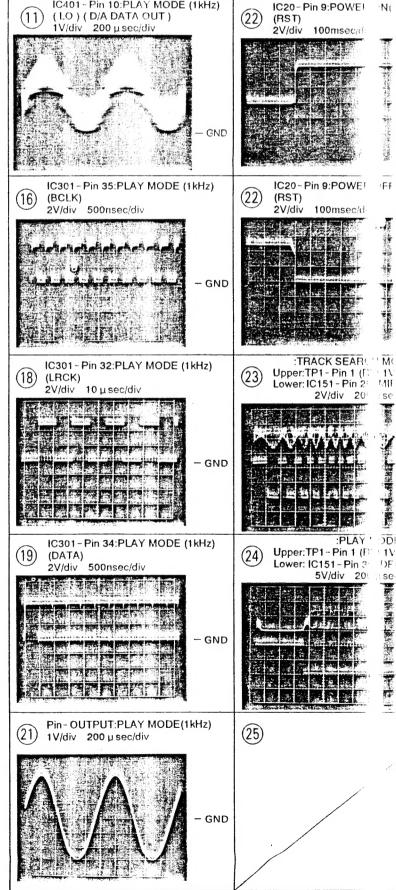




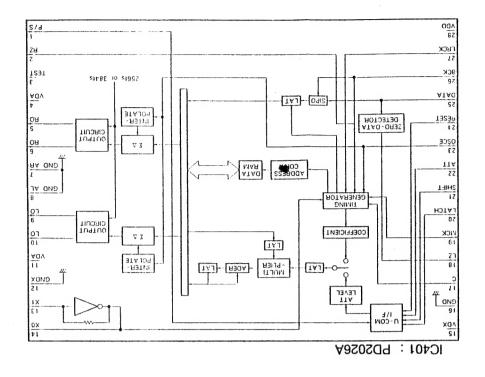

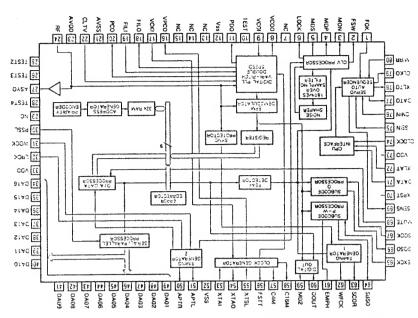

IC301: CXDS200PQ

IC BLOCK DIAGRAMS

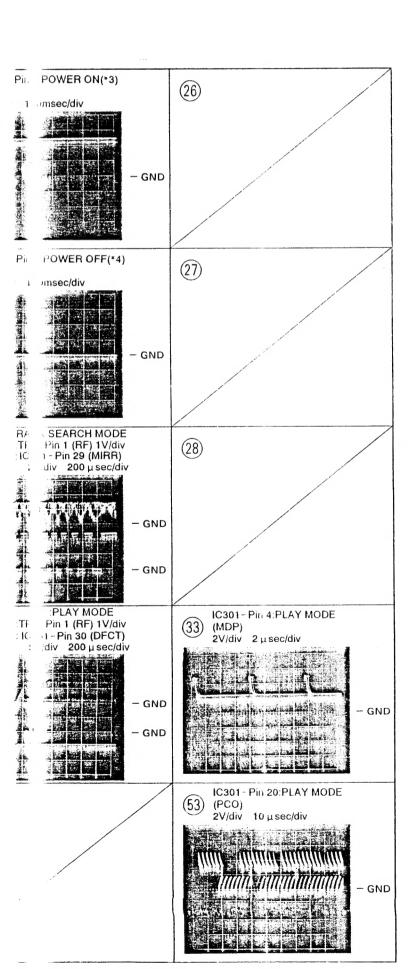

1. RESISTORS:

Indicated in Ω , 1/4W, 1/6W and 1/8W, \pm 5% tolerance unless otherwise noted k ; k $\,\Omega\,$, M; M Ω , (F); \pm 1%, (G); \pm 2%, (K); \pm 10%, (M); \pm 20% tolerance.

Indicated in capacity (µF) / voltage(V)unless otherwise noted p; pF. Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE, CURRENT: ; DC voltage (V) at play state.

; DC current at play state.

Value in () is DC current at stop state

4. OTHERS:

→ ; Signal route.

(*); Adjusting point.

The $\stackrel{\wedge}{=}$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

zi: marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

5. SWITCHES: (The underlined indicates the switch position)

LOADING BOARD ASSEMBLY

S601: LPS1

S602: LPS2

SELECT BOARD ASSEMBLY

\$603 : MZ\$1

S604: MZS2 S605 : DCHM

S606 : DCNT

MECHANISM BOARD ASSEMBLY S610 : INSIDE

FUNCTION BOARD ASSEMBLY S701 : DISC2

S702 : DISC1

S703 : AUTO FADER

S704 : DELETE S705 : PROGRAM

S717: COMPU PGM EDIT

S718: HI - LITE SCAN

S719 : DISC 3

S720 : DISC 4 S721 : ADLC

\$722 : TIME FADE EDIT S723 : DISC 5 S724 : DISC 6

S725: [] (PAUSE)


S726: REPEAT S727 : (STOP)

S728 : TIME


S729: ▶ (PLAY)

S730: RANDOM PLAY

S731: | < < (TRACK/MANUAL SEARCH) S732: ▶▶ ▶► (TRACK/MANUAL SEARCH)

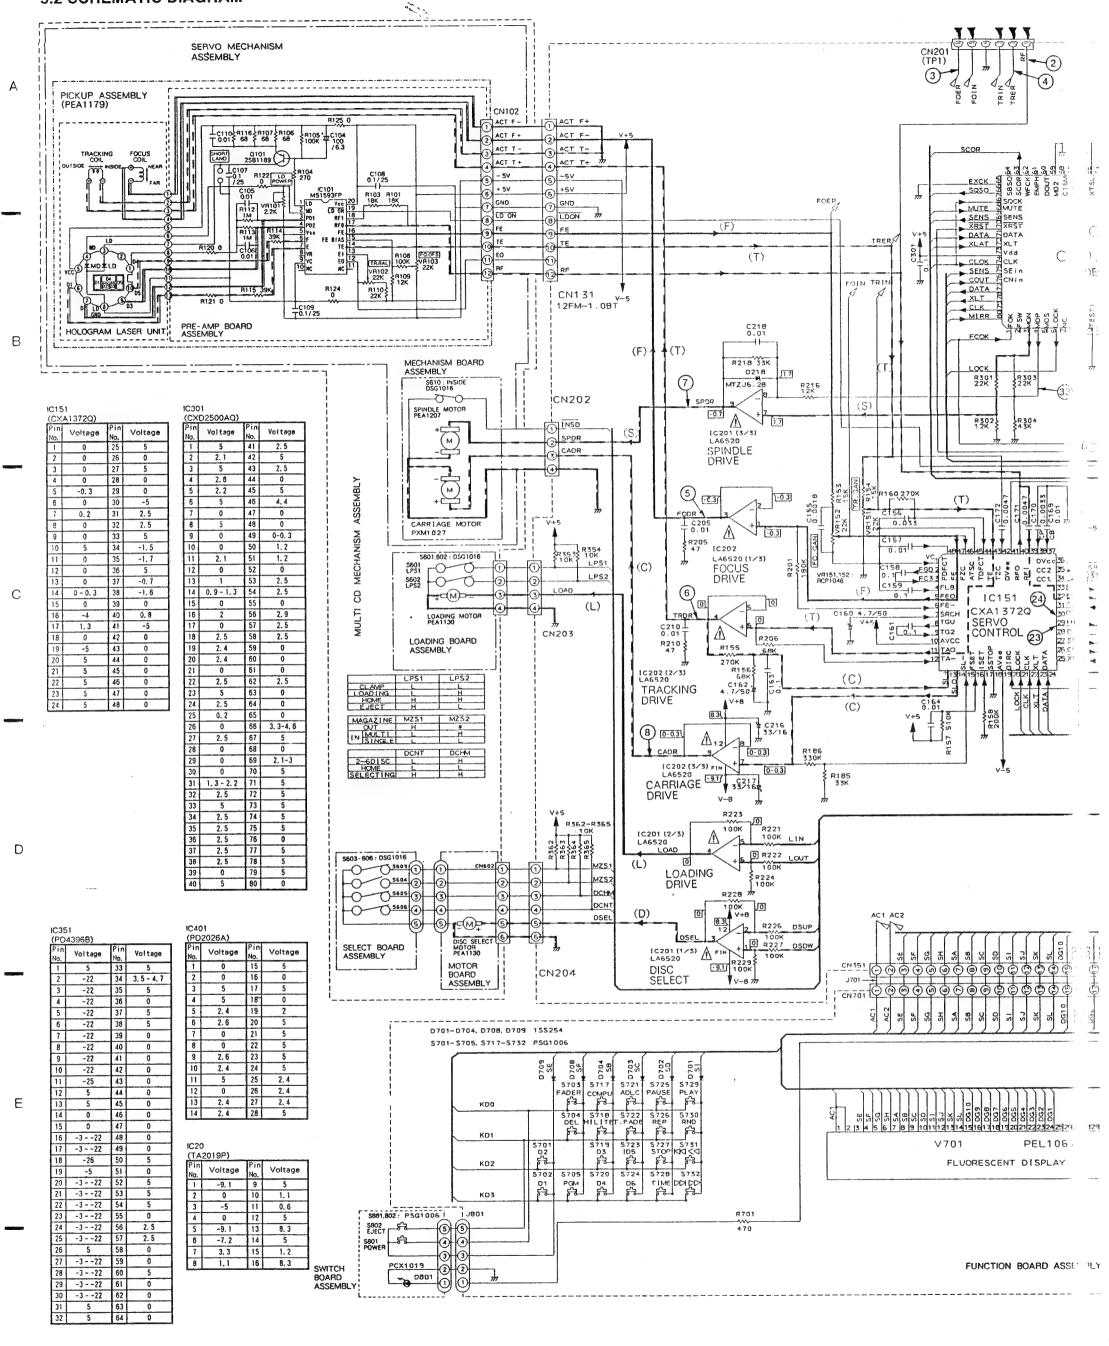

F

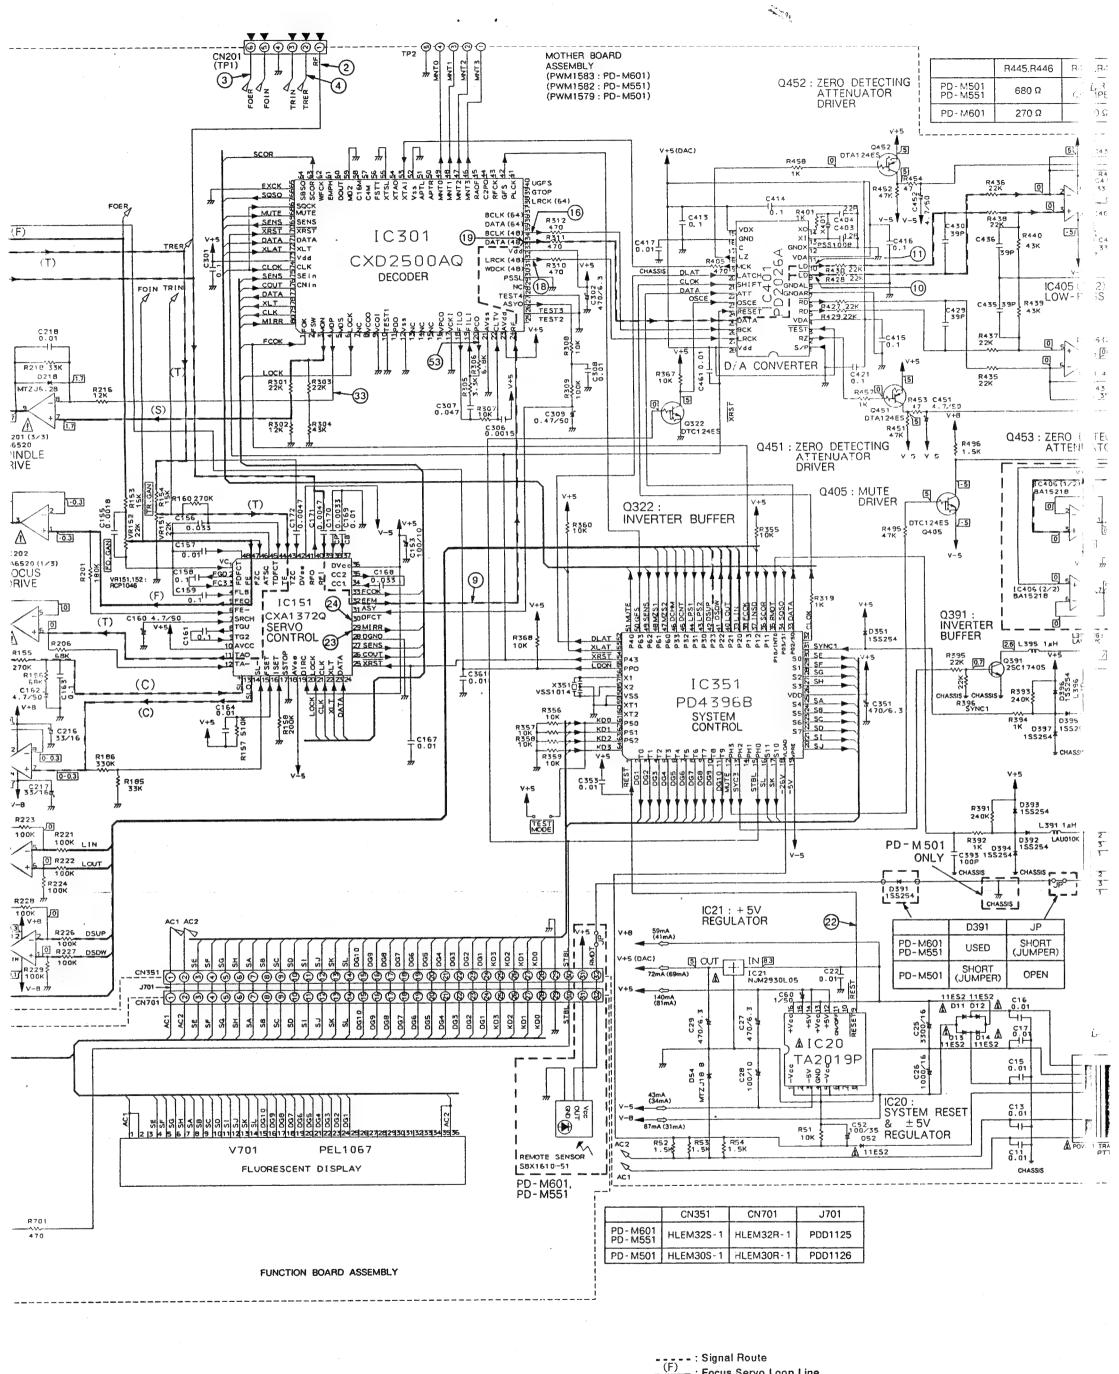


- : Focus Servo Loop Line (L) : Loading Motor Route

(T) : Tracking Servo Loop Line (S) : Spindle Motor Route

(C) __: Carriage Motor Route (D) : Disc Select Motor Route > : Measurement Point

6

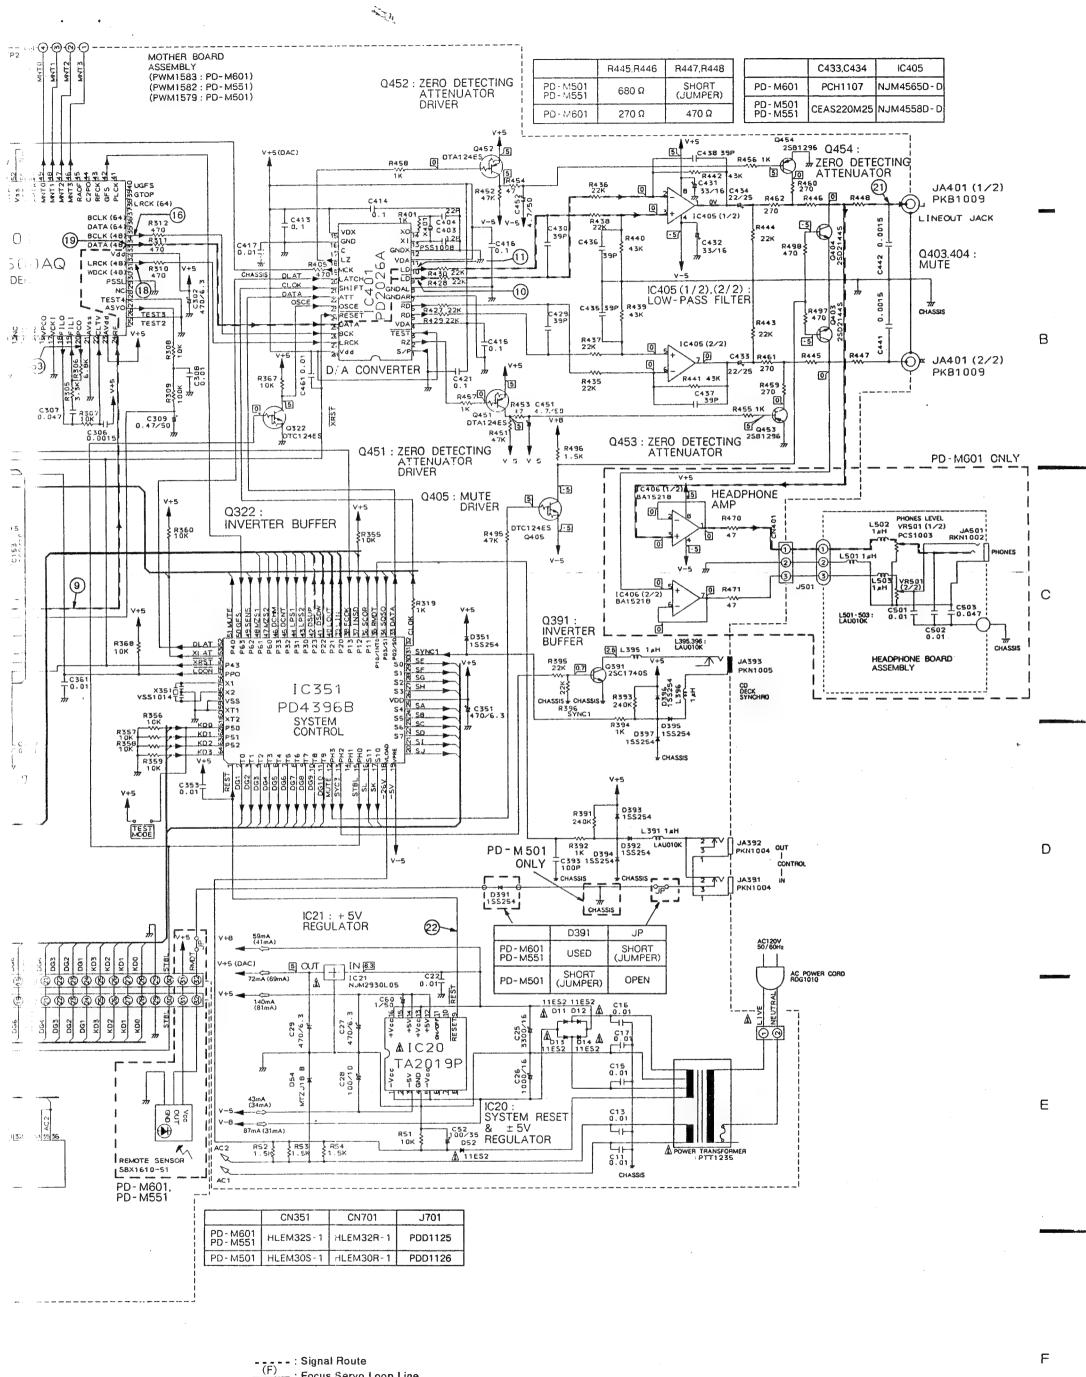



6


- : Focus Servo Loop Line (L) : Loading Motor Route (T) --: Tracking Servo Loop Line 🗕 : Spindle Motor Route (C) : Carriage Motor Route (D) _ : Disc Select Motor Route > : Measurement Point

7


8

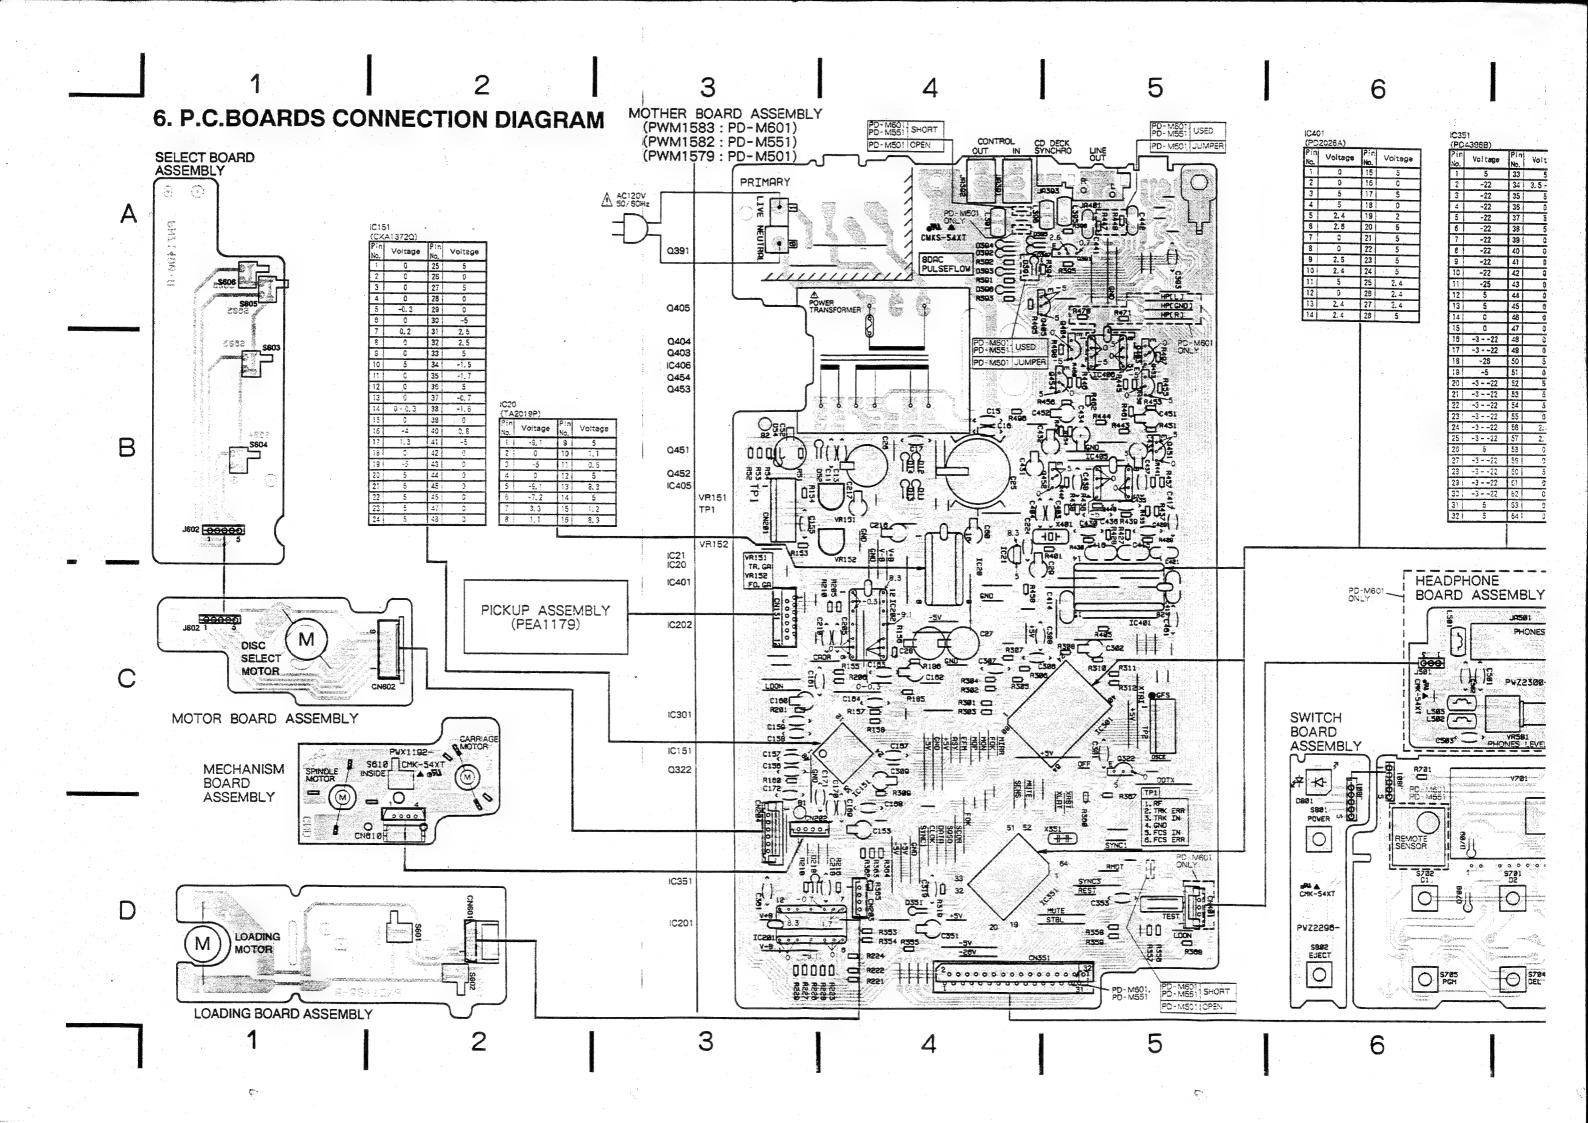


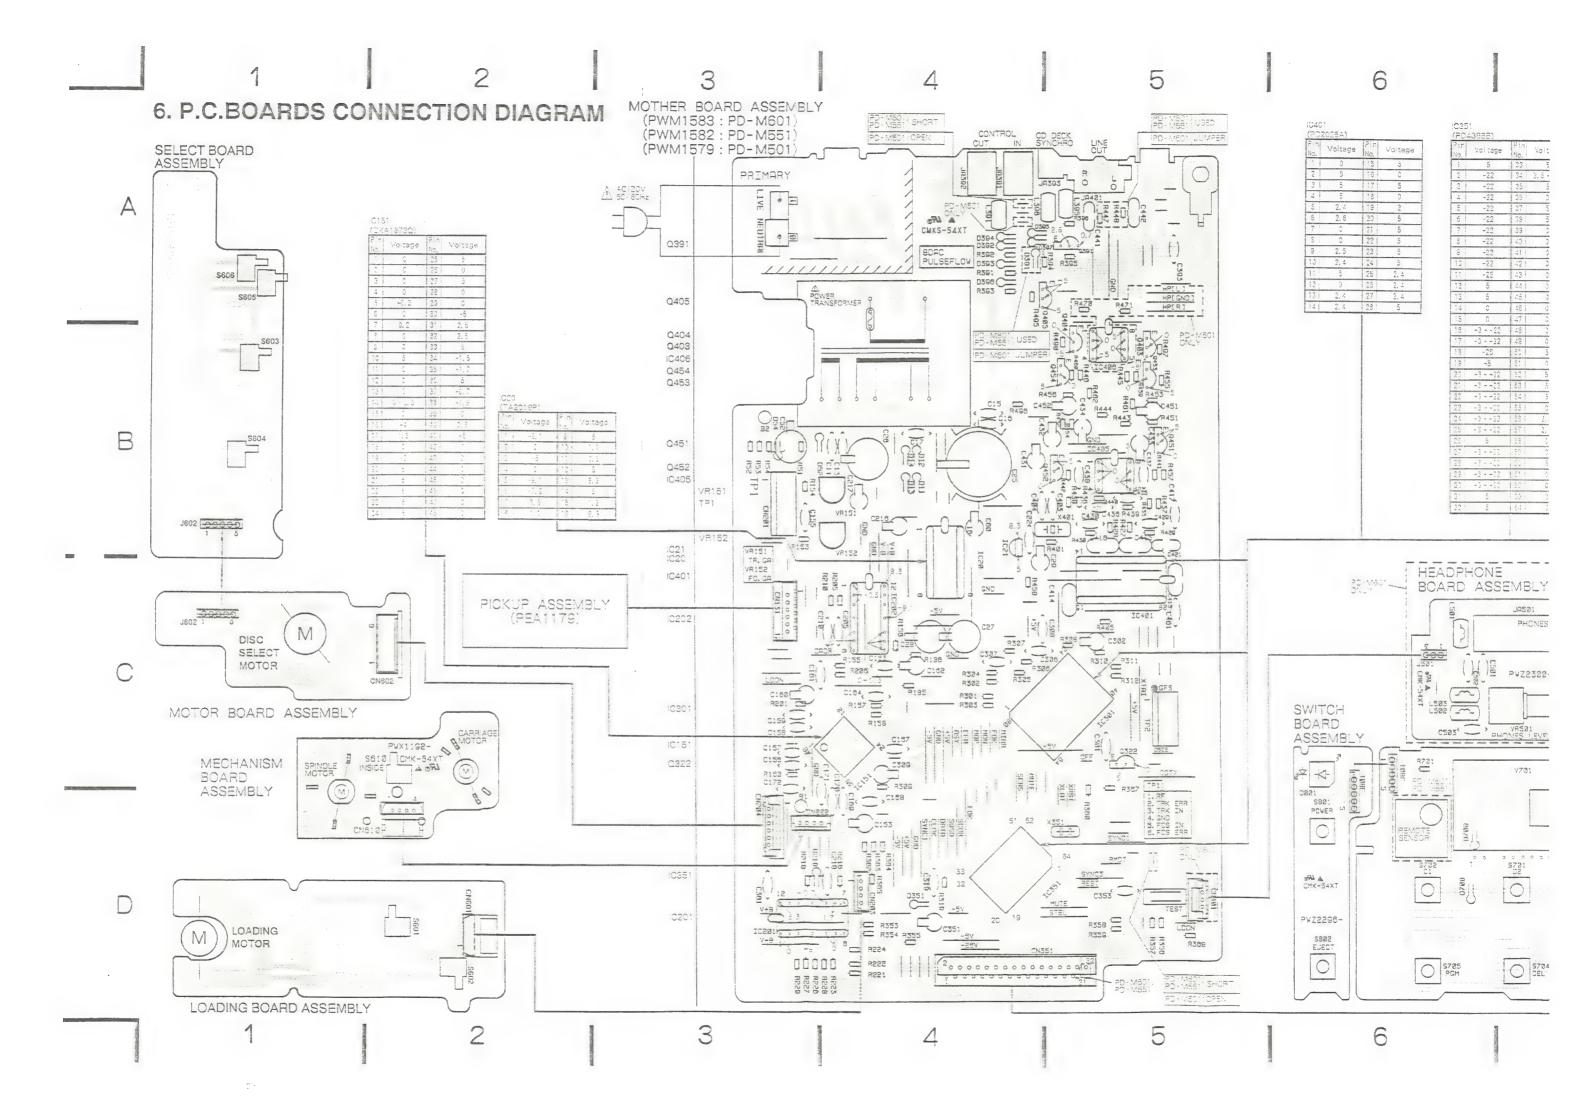


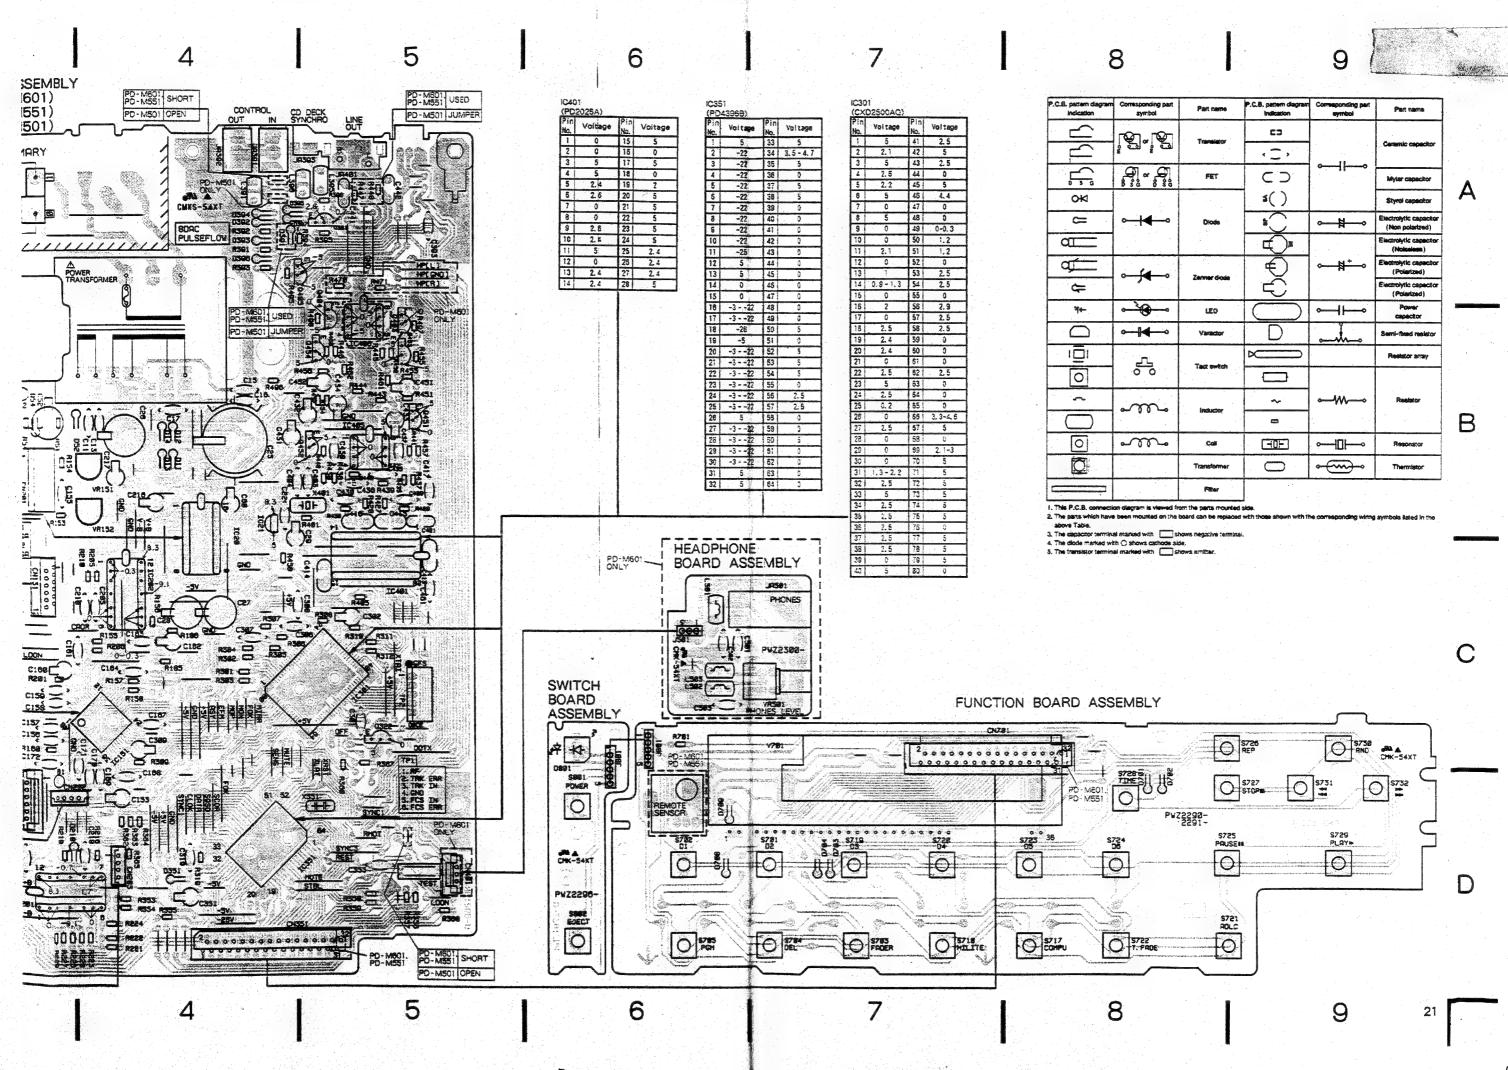



€.

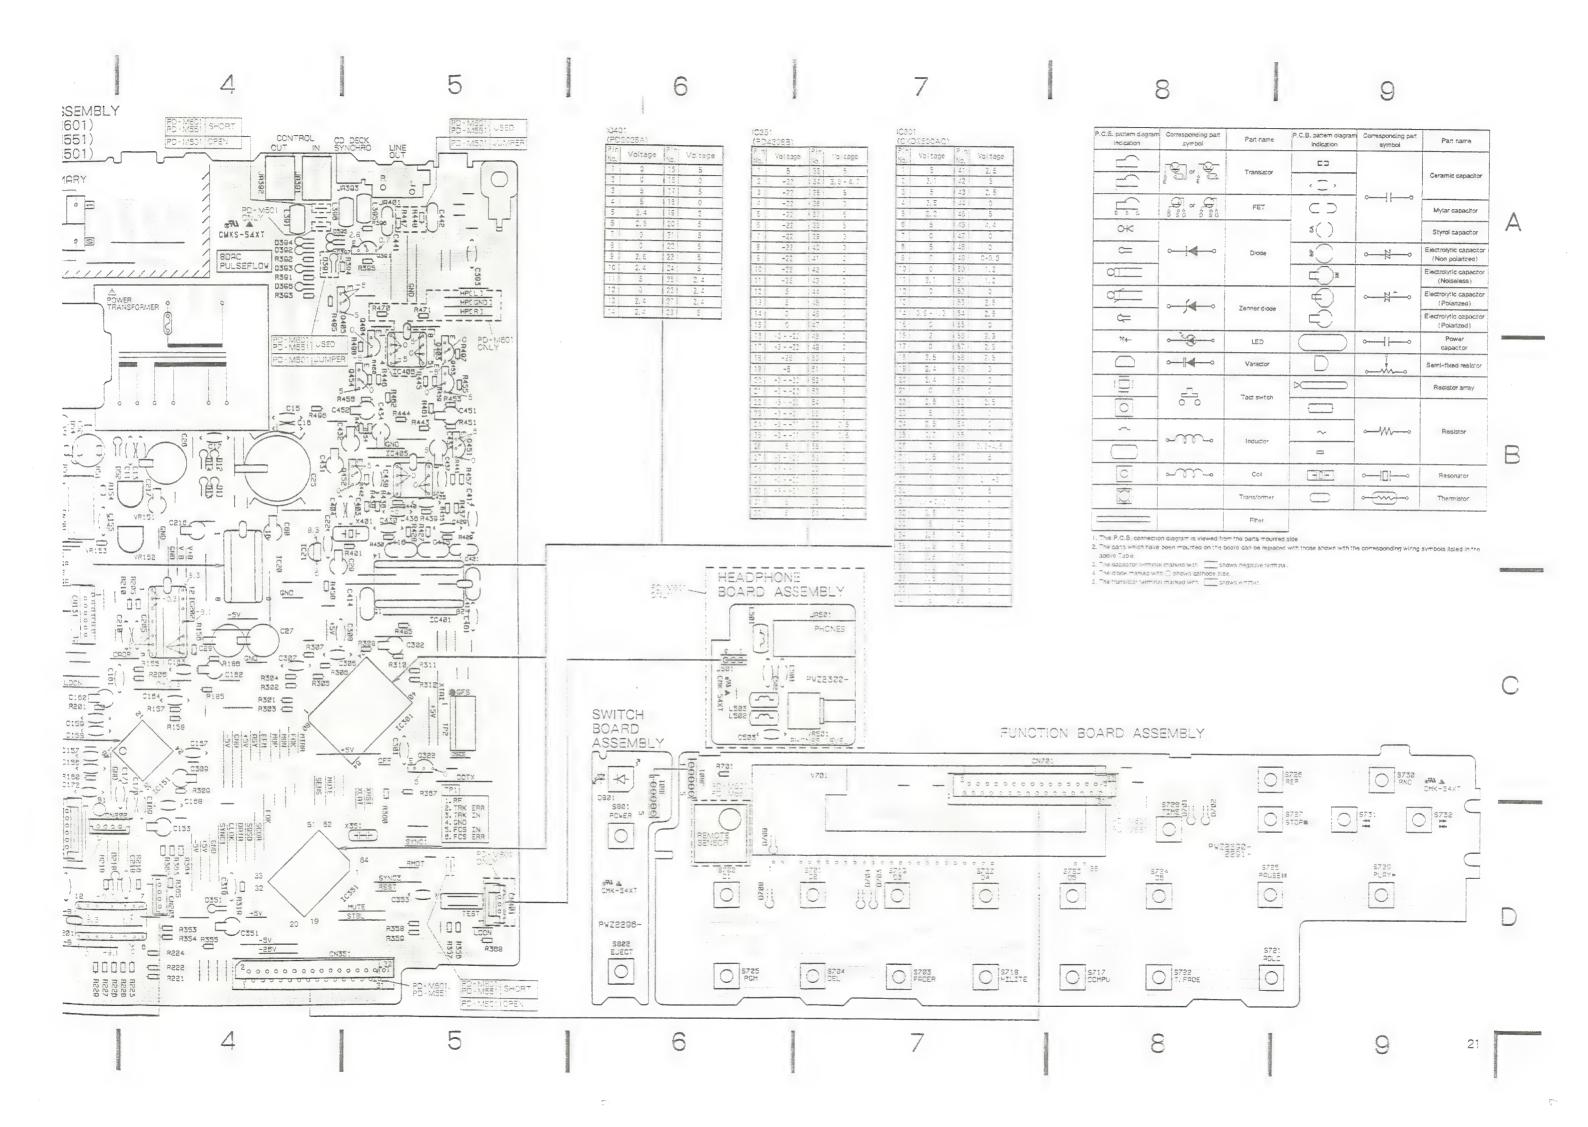

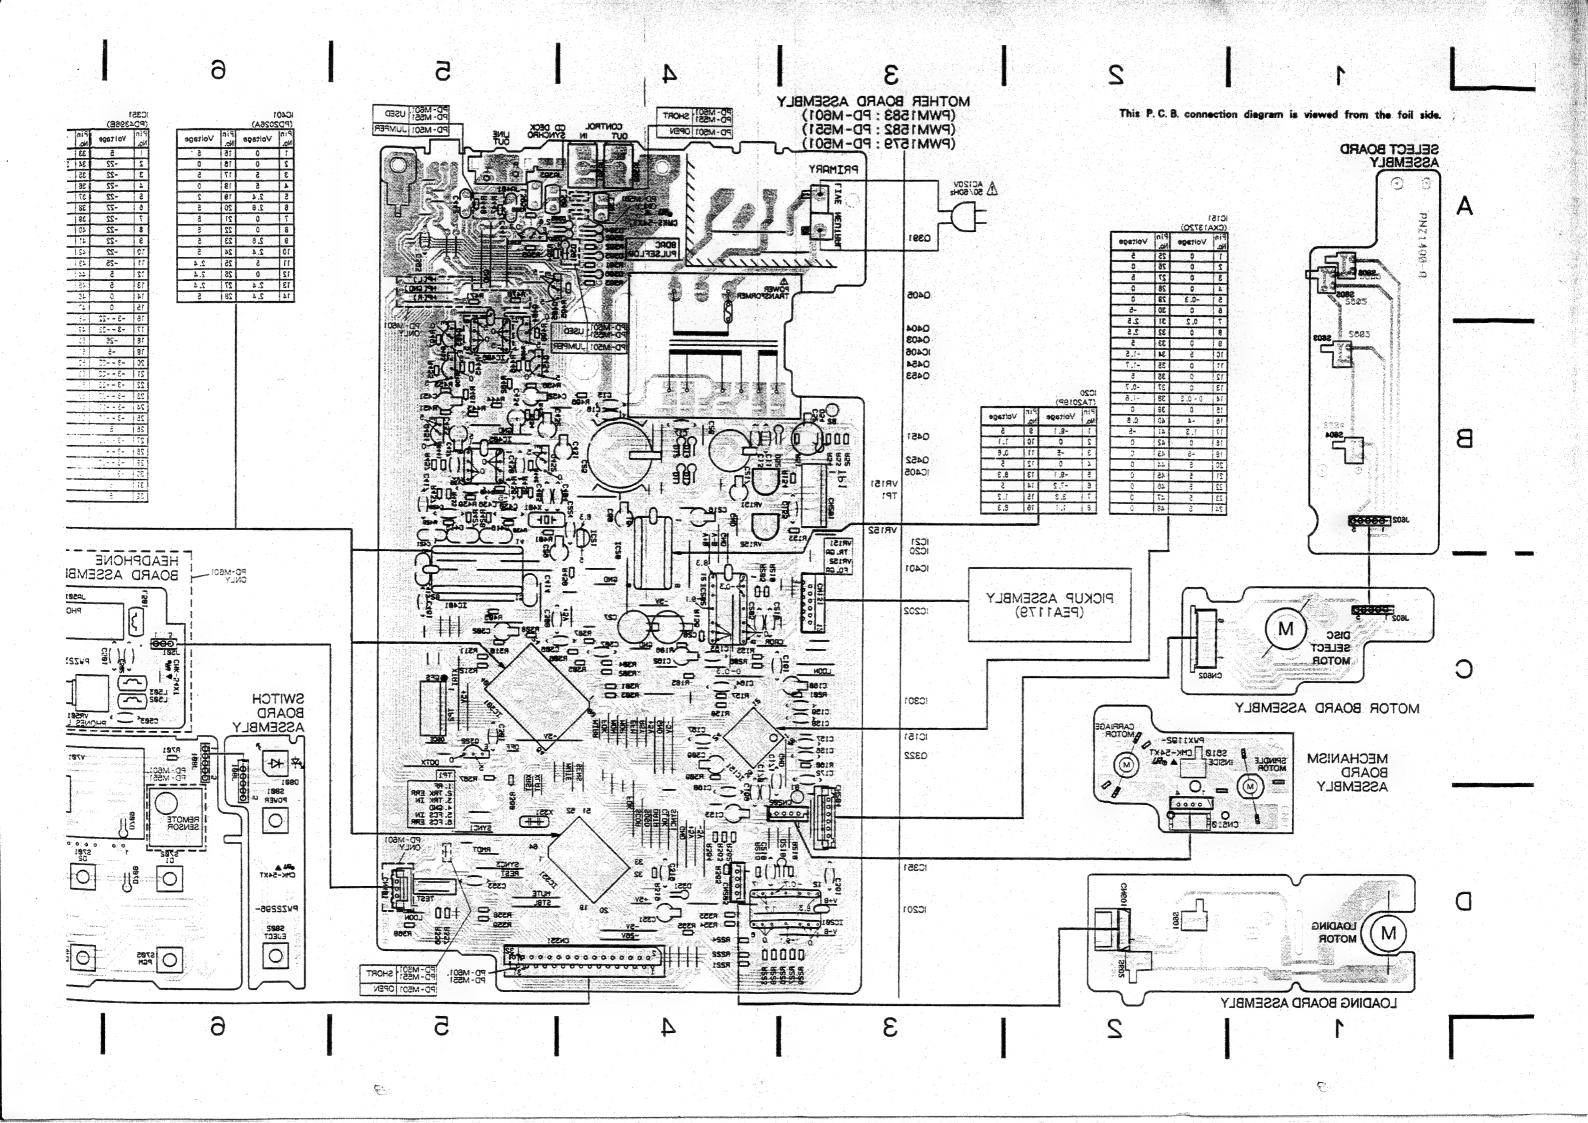


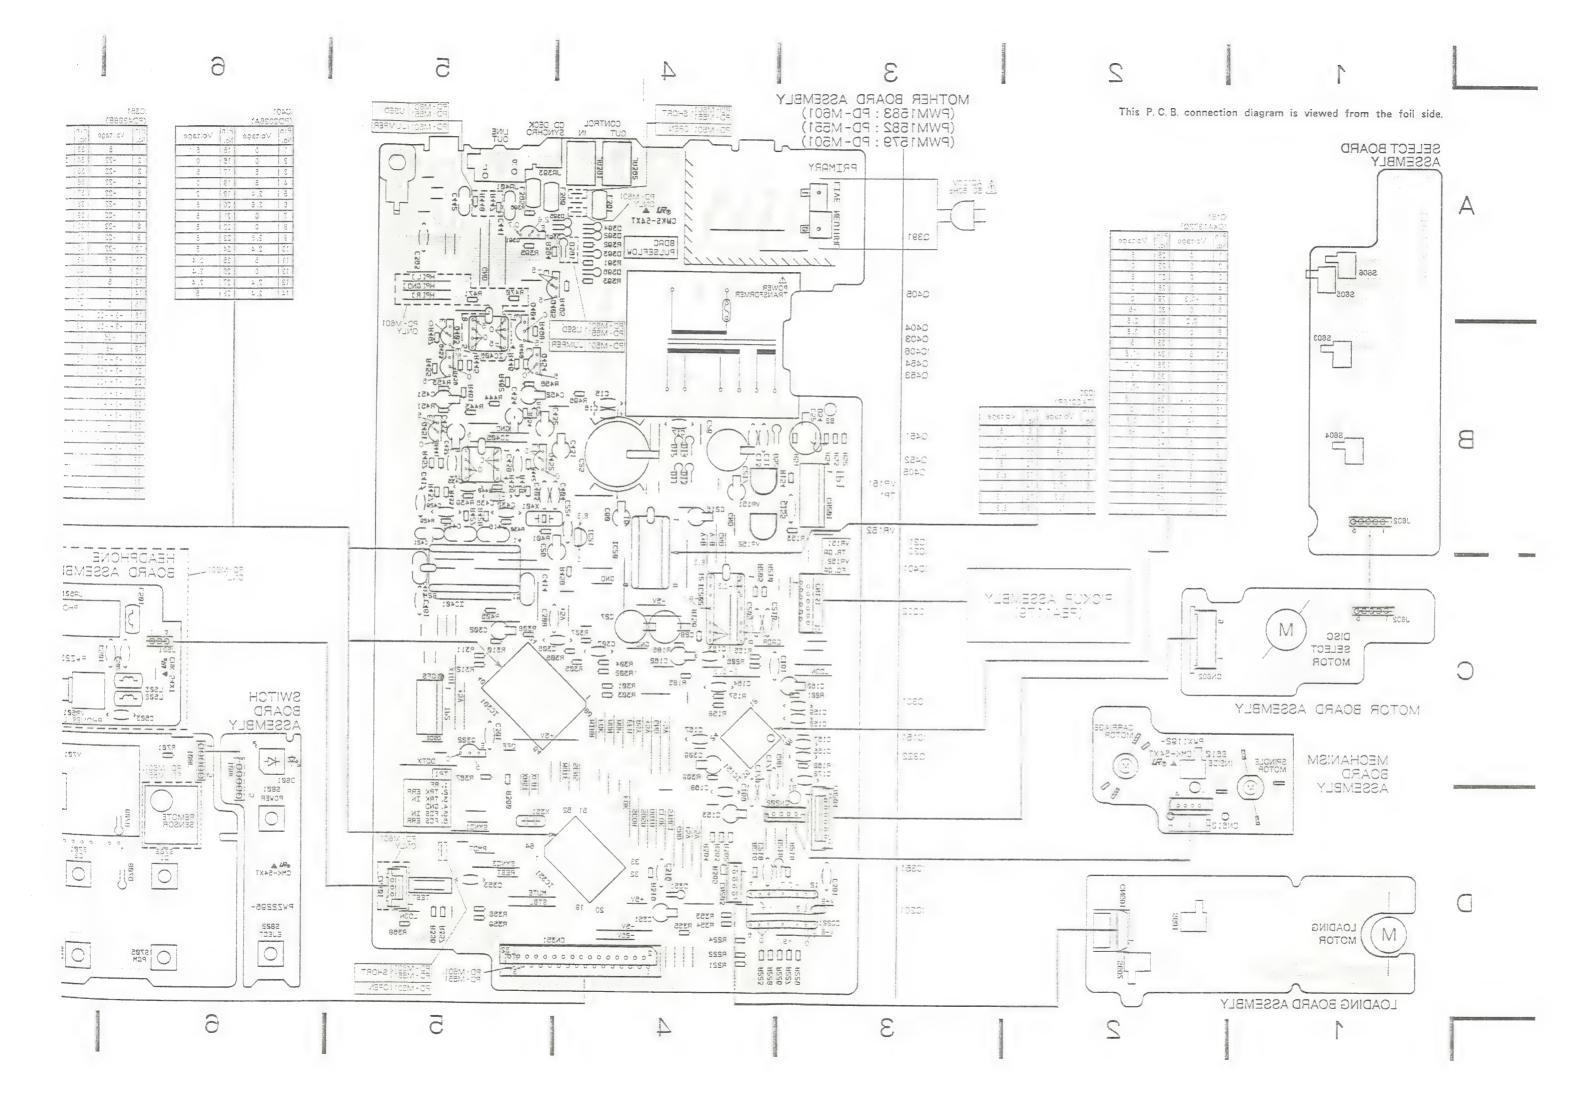

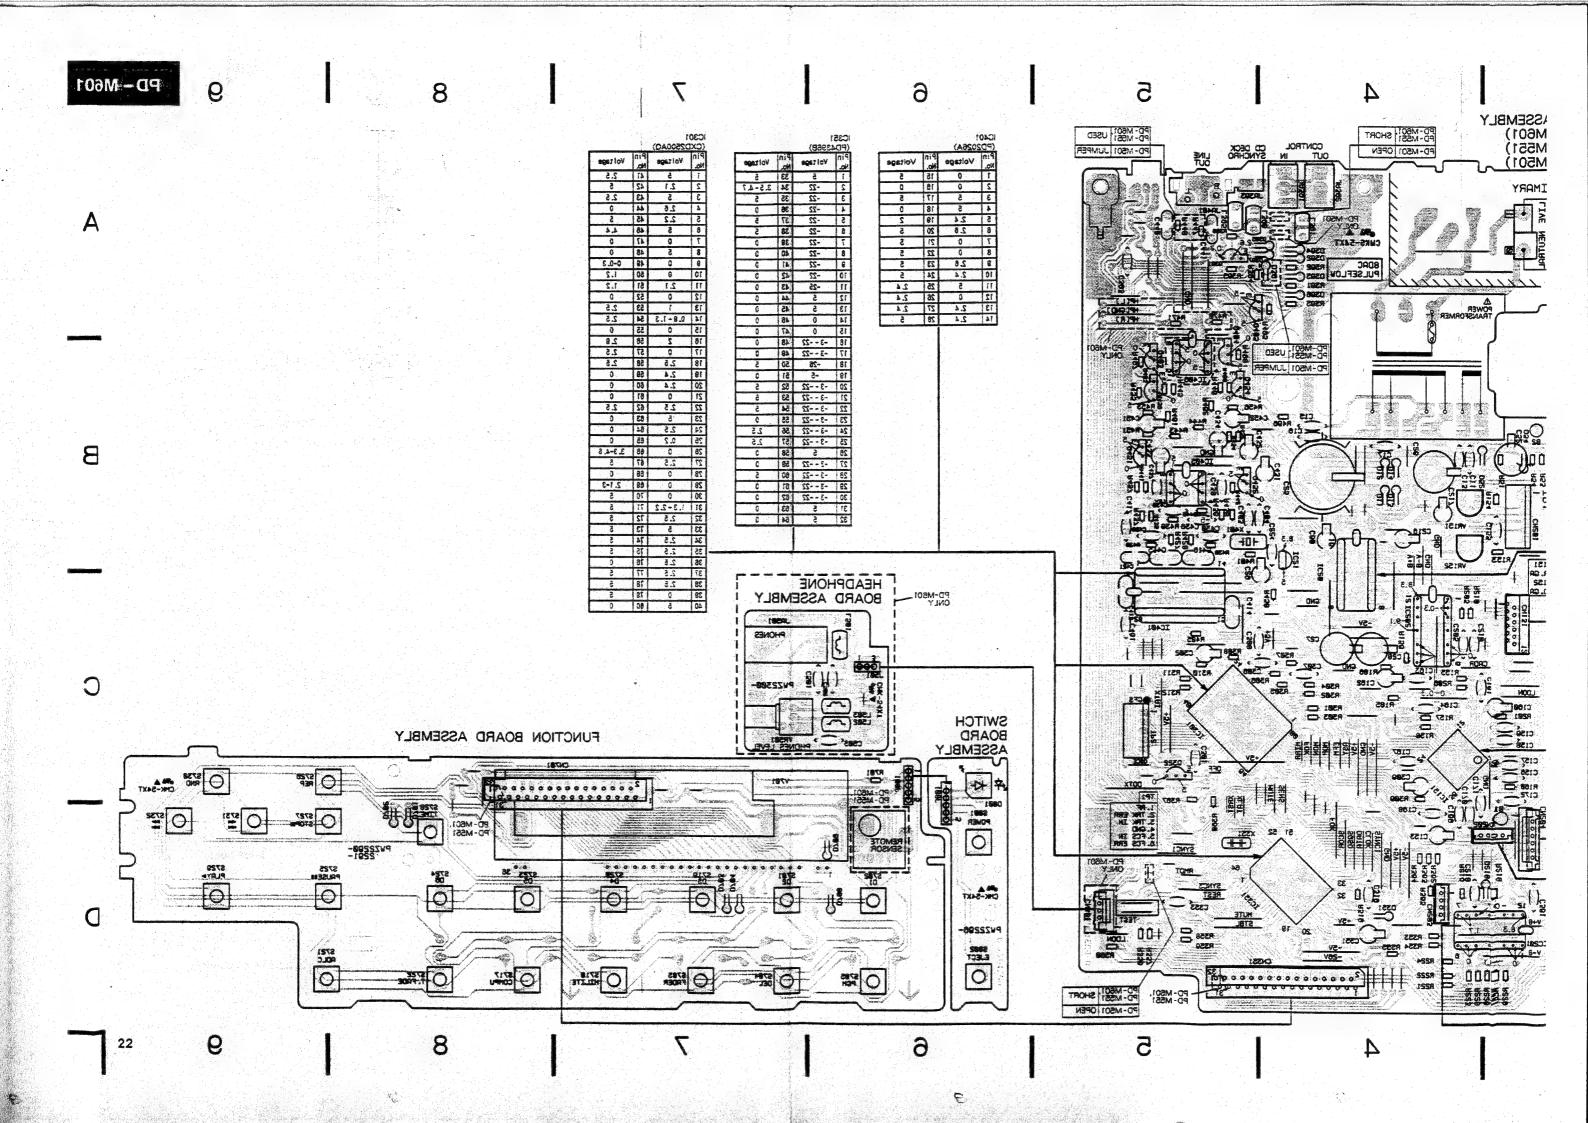

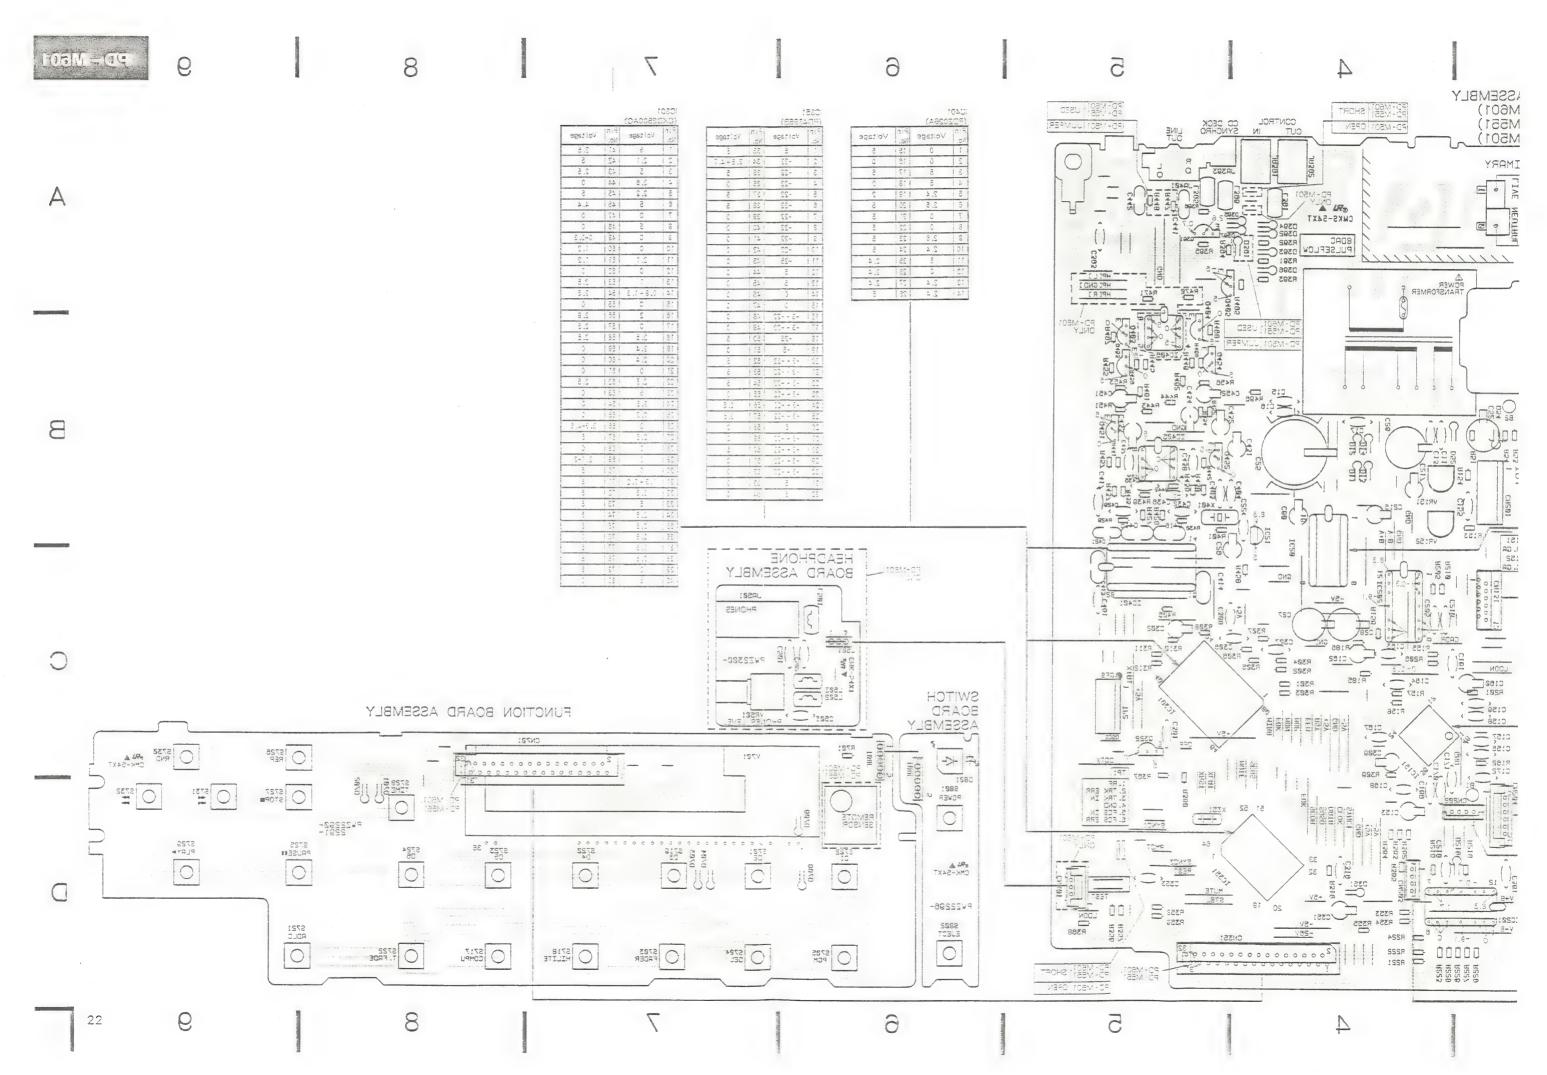

<u>.</u>

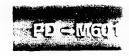

7. PCB PARTS LIST

NOTES:


- Part without part number cannot be supplied.
- Parts marked by " " are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- The △ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing be sure to use parts of identical designation.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.
- Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).
 - 560Ω $56 \times 10'$ 561 RD1/8PM [5] [6] [1] J

 $47k \Omega$ $47 \times 10'$ 473 RD1/4PS [4] [7] [3] J

 0.5Ω 0.5Ω RN2H [0] [R] [5] K

 1Ω 0.10 RS1P [0] [1] [0] K
- Ex.2 When there are 3 effective digits(such as in high precision metal film resistors).

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
LIST	OF AS	SEMBLIES		CAP	ACITORS		
_					C11, 13	CERAMIC CAPACITOR	CKCYF103Z50
◉	Mother 1	board assembly	PWM1583		C15	CERAMIC CAPACITOR	CKCYF103Z50
	Motor be	oard assembly			C153	ELECTR. CAPACITOR	CEAS101M10
	Mechanis	sm board assembly			C155	CERAMIC CAPACITOR	CKCYB182K50
		board assembly			C156	CERAMIC CAPACITOR	CGCYX333K25
	Select bo	pard assembly					
					C157	CERAMIC CAPACITOR	CGCYX103K25
◉	Sub boar	rd assembly	PWX1224		C158, 159	CERAMIC CAPACITOR	CGCYX 104K25
		tion board assembly			C16	CERAMIC CAPACITOR	CKCYF 103Z50
	- Swite	ch board assembly			C160	ELECTR. CAPACITOR	CEAS4R7M50
	L— Head	phone board assembly			C161	CERAMIC CAPACITOR	CGCYX 104K25
					C162	ELECTR. CAPACITOR	CEAS4R7M50
_	_				C163	CERAMIC CAPACITOR	CGCYX 104K25
M	OTHER	BOARD ASSEMB	LY		C164	CERAMIC CAPACITOR	CGCYX 103K25
(F	WM158	3)			C167	CERAMIC CAPACITOR	CKCYF 103Z50
•		•			C168	CERAMIC CAPACITOR	CGCYX 333K25
SEM	CONDUC	TORS					
	IC151	SERVO IC	CXA1372Q		C169	CERAMIC CAPACITOR	CGCYX 103K25
Δ	IC20	REGULATOR IC	TA2019P		C17	CERAMIC CAPACITOR	CKCYF 103Z50
Δ	IC201, 202	POWER OP-AMP, IC	LA6520		C170	CERAMIC CAPACITOR	CKCYB332K50
	IC21	REGULATOR, IC	NJM2930L05		C171, 172	CERAMIC CAPACITOR	CKCYB 472K50
	IC301	EFM DEMODULATION IC	CXD2500AQ		C205, 210	CERAMIC CAPACITOR	CKCYF 103Z50
	IC351	MICROCOMPUTER, IC	PD4396B		C216, 217	ELECTR. CAPACITOR	CEAS3 30M16
	IC401	D/A CONVERTER, IC	PD2026A		C218	CERAMIC CAPACITOR	CGCYX 103K25
	IC405	OP-AMP IC	NJM4565D-D		C22	CERAMIC CAPACITOR	CKCYF 103Z50
	IC406	OP-AMP IC	BA15218		C25	ELECTR. CAPACITOR	CEAS3 32M16
	Q322	TRANSISTOR	DTC124ES		C26	ELECTR. CAPACITOR	CEAS1 02M16
	Q 391	TRANSISTOR	2SC1740S		C27	ELECTROLYTIC CAPACIT	CEAS4 71M6R3
	Q403, 404	TRANSISTOR	2SD2144S		C28	ELECTR. CAPACITOR	CEASI O1M10
	Q405	TRANSISTOR	DTC124ES		C29	ELECTROLYTIC CAPACIT	CEAS4 71M6R3
	Q451, 452		DTA124ES		C301	CERAMIC CAPACITOR	CGCYX 104K25
	Q453, 454	TRANSISTOR	2 SB1296		C302	ELECTROLYTIC CAPACIT	CEAS4 71M6R3
Δ	D11-14	DIODE	11ES2		C306	CERAMIC CAPACITOR	CKCYB 152K50
	D218	ZENNER DIODE	MTZJ6. 2B		C307	CERAMIC CAPACITOR	CGCYX 473K25
	D351	DIODE	1SS254		C308	CERAMIC CAPACITOR	CGCYX 103K25
	D391-397		1SS254		C309	ELECTR. CAPACITOR	CEASR 47M50
$\Delta\!$	D52	DIODE	11ES2		C351	ELECTROLYTIC CAPACIT	CEAS4 71M6R3
	D54	ZENNER DIODE	MTZJ18B				
COIL	c				C353, 361	CERAMIC CAPACITOR	CKCYF 103Z50
COIL		AVIAL INDUCTOR	I AUDIO		C393	CERAMIC CAPACITOR	CCCSL 101J50
	L391	AXIAL INDUCTOR	LAU010K		C403	CERAMIC CAPACITOR	CCCH 120J50
	1232, 236	AXIAL INDUCTOR	LAU010K		C404	CERAMIC CAPACITOR	CCCH 220J50
					C413-416	FILM CAPACITOR (0.1μ)	PCI10 32
							2

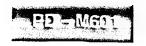

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	C417 C421 C429, 430 C431, 432	CERAMIC CAPACITOR FILM CAPACITOR (0.1 \(\mu \)) CERAMIC CAPACITOR ELECTR. CAPACITOR	CKCYF103Z50 PCL1032 CCCCH390J50 CEAS330M16		CTION CONDUC	BOARD ASSEMBL	.Y
	C435-438	ALUMINUM (22 µ/25V) CERAMIC CAPACITOR	PCH1107 CCCCH390J50		D701-704 D708, 709	DIODE	1SS254 1SS254
	C441, 442 C451, 452 C461 C52 C60	FILM CAPACITOR (0.0015 µ) ELECTR. CAPACITOR CERAMIC CAPACITOR ELECTR. CAPACITOR ELECTR. CAPACITOR	PCL1030 CEAS4R7M50 CKCYF103Z50 CEAS101M35 CEAS010M50	SWIT	S701-705	TACT SWITCH (DISC 2, 1, AUTO FADER, DELETE, PROGRAM)	PSG1006
	OTHER RES	VR(22kΩ) ISTORS	RCP1046 RD1/6PM	(COMPU PGM ADLC, TIM REPEAT,	TACT SWITCH 1 EDIT, HI-LITE SCAN, DISC 3, 4 1E FADE EDIT, DISC 5, 6, 11, 1, TIME, D., RANDOM PLAY, 1. DD DD	PSG1006
OTHE		ADD LIST AND ADDRESS OF THE PARTY OF THE PAR		•	11111	7	1
	X351 X401	CERAMIC RESONATOR (4. 19MHz) XTAL RES (OSC)	VSS1014 PSS1008	RESIS	STOR R701	CARBON FILM RESISTOR	PP1 (PPI)
	6 11.01	(16. 9344MHz)				CARDON FILM RESISION	RD1/6PM471J
	CN131	CONNECTOR FOR FFC (12P)	12FM-1. OBT	OTHE		NCOD	
	CN351 JA391, 392 JA393 JA401	32P FFC CONNECTOR JACK/12V (CONTROL IN, OUT) MINI JACK(CD DECK SYNCHRO) 2P PIN JACK (LINE OUT)	HLEM32S-1 PKN1004 PKN1005 PKB1009		REMOTE SE CN701 V701	32P FFC CONNECTOR FL INDICATOR TUBE	SBX1610-51 HLEM32R-1 PEL1067
				SWIT	сн во	ARD ASSEMBLY	
MOT	OR BO	ARD ASSEMBLY			CONDUC	TOR	
	Motor boa	rd assembly has not service	parts.	SWITC	D801 CHES	LED	PCX1019
					S801, 802	TACT SWITCH	PSG1006
		BOARD ASSEMB	LY			(POWER, EJECT)	
SWITC	S610	PUSH SWITCH (INSIDE)	DSG1016	HEAD	OPHON	E BOARD ASSEME	BLY
100	NING B	0455 400545		COILS		AXIAL INDUCTOR	LAU010K
		OARD ASSEMBLY		CARA	CITORS		
SWITC		PUSH SWITCH (LPS1, LPS2)	DSG1016	CAPA		CERAMIC CAPACITOR CERAMIC CAPACITOR	CKCYF103Z50 CKCYF473Z50
SELE	CT BO	ARD ASSEMBLY		RESIS	TORS VR501	VARIABLE RESISTOR (PHONES LEVEL)	PCS1003
SWITC		PUSH SWITCH	DSG1016	OTHE	RS JA501	HEADPHONE JACK (PHONES)	RKN1002
		(MZS1, MZS2, DCHM, DCNT)					



8. ADJUSTMENTS

8.1. Adjustment Methods

If a disc player is adjusted incorrectly or inadequately, it may malfunction or not work at all even though there is nothing at all wrong with the pickup or the circuitry. Adjust correctly following the adjustment procedure.

Adjustment Items/Verification Items and Order

If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in steps 1-4, the pickup block may be defective.

Step	Item	Test Point	Adjustment Location
1	Focus offset verification	TP1, Pin 6 (FCS. ERR)	None
2	Tracking error balance verification	TP1, Pin 2(TRK. ERR)	None
3	Pickup radial/tangential direction tilt adjustment	TP1, Pin 1 (RF)	Radial tilt adjustment screw, Tangential tilt adjustment screw
4	RF level verification	TP1, Pin 1 (RF)	None
5	Focus servo loop gain adjustment	TP1, Pin 5 (FCS. IN) TP1, Pin 6 (FCS. ERR)	VR152(FCS. GAN)
6	Tracking servo loop gain adjustment	TP1, Pin 3 (TRK. IN) TP1, Pin 2 (TRK. ERR)	VR151 (TRK. GAN)

Abbreviation table


FCS. ERR :Focus Error
TRK. ERR :Tracking Error
FCS GAN :Focus Gain
TRK GAN :Tracking Gain
FCS. IN :Focus In
TRK. IN :Tracking In

Measuring Instruments and Tools

- 1. Dual trace oscilloscope (10:1 probe)
- 2. Low-frequency oscillator
- 3. Test disc (YEDS 7)
- 4. Low pass filter ($39k\Omega + 0.001 \mu F$)
- 5. Resistor (100 k Ω)
- 6. Standard tools



Test Point and Adjustment Variable Resistor Positions

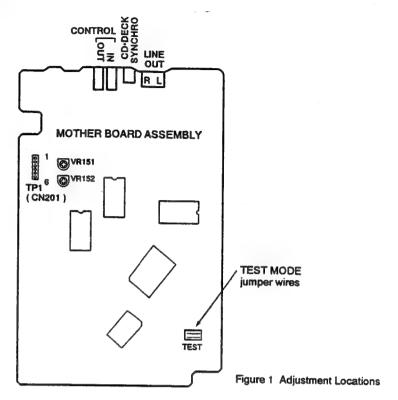

Notes

- 1. Use a 10:1 probe for the oscilloscope.
- 2. All the knob positions (settings) for the oscilloscope in the adjustment procedures are for when a 10:1 probe is used.

Test Mode

These models have a test mode so that the adjustments and checks required for service can be carried out easily. When these models are in test mode, the keys on the front panel work differently from normal. Adjustments and checks can be carried out by operating these keys with the correct procedure. For these models, all adjustments are carried out in test mode.

[Setting these models to test mode]

How to set this model into test mode.

- 1. Unplug the power cord from the AC socket.
- 2. Short the test mode jumper wires. (See Figure 1.)
- 3. Plug the power cord back into the AC socket.

When the test mode is set correctly, the display is different from what it usually is when the power is turned on. If the display is still the same as usual, test mode has not been set correctly, so repeat Steps 1-3.



[Release from test mode]

Here is the procedure for releasing the test mode:

- 1. Press the STOP key and stop all operations.
- 2. Unplug the power cord from the AC socket.

[Operations of the keys in test mode]

Code	Key Name	Function in Test Mode	Explanation
	PGM (PROGRAM)	Focus servo close	The laser diode is lit up and the focus actuator is lifted up, then lowered slowly and the focus servo is closed at the point where the objective lens is focused on the disc. With the player in this state, if you lightly rotate the stopped disc by hand, you can hear the sound the focus servo. If you can hear this sound, the focus servo is operating correctly. If you press this key with no disc mounted, the laser diode lights up, the focus actuator is pulled up, then the actuator is lowered and raised three times and returned to its original position.
Δ	PLAY	Spindle servo ON	Starts the spindle motor in the clockwise direction and when the disc rotation reaches the prescribed speed (about 500 rpm at the inner periphery), sets the spindle servo in a closed loop. Be careful. Pressing this key when there is no disc mounted makes the spindle motor run at the maximum speed. If the focus servo does not go correctly into a closed loop or the laser light shines on the mirror section at the outermost periphery of the disc, the same symptom is occurred.
	PAUSE	Tracking servo close/open	Pressing this key when the focus servo and spindle servo are operating correctly in closed loops puts the tracking servo into a closed loop, displays the track number being played back and the elapsed time on the front panel, and outputs the playback signal. If the elapsed time is not displayed or not counted correctly or the audio is not played back correctly, it may be that the laser is shining on the section with no sound recorded at the outer edge of the disc, that something is out of adjustment, or that there is some other problem. This key is a toggle key and open/close the tracking servo alternately. This key has no effect if no disc is mounted.



Code	Key Name	Function in Test Mode	Explanation
\\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\	TRACK / MANUAL SEARCH REV	Carriage reverse (inwards)	Moves the pickup position toward the inner diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
☆.☆	TRACK / MANUAL SEARCH FWD	Carriage forward (outwards)	Moves the pickup position toward the outer diameter of the disc. When this key is pressed with the tracking servo in a closed loop, the tracking servo automatically goes into an open loop. Since the motor does not automatically stop at the mechanical end point in test mode, be careful with this operation.
	STOP	Stop	Initializes and the disc rotation stops. The pickup and disc remain where they are when this key is pressed.
≙	EJECT	CD magazine eject	Stores Disc 1 in the CD magazine, then ejects the CD magazine. However, even though the CD magazine is ejected, the pickup does not return to the park position. Even if the CD magazine is mounted again, the pickup remains where it is.


Note: When inserting the magazine, disc 1 of the magazine is loaded automatically.




[How to play back a disc in test mode]

In test mode, since the servos operate independently, playing back a disc requires that you operate the keys in the correct order to close the servos.

Here is the key operation sequence for playing back a disc in test mode.

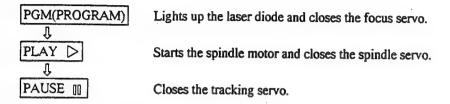

Wait at least 2-3 seconds between each of these operations.

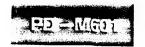

1. Focus Offset Verification

ne model does not focus in an	nd the RF signal is dirty.	
onnect the oscilloscope to		
P1, Pin 6 (FCS. ERR)	● Player state	Test mode, stopped (just the Power switch on)
ettings] 5 mV/division 10 ms/division	● Adjustment location	None
DC mode	● Disc	None needed
6	10 ms/division	10 ms/division

Note: If the specified values cannot be obtained or no adjustment is possible by performing the verifications or adjustments described in adjustment items 1 - 4, the pickup block may be defective.




2. Tracking Error Balance Verification

Objective	To verify t	To verify that there is no variation in the sensitivity of the tracking photo diode.				
Symptom when out of adjustment	Play does r	lay does not start or track search is impossible.				
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 2 (TRK. ERR). This connection may be via a low pass filter.		Player state Adjustment location	Test mode, focus and spindle servos closed and tracking servo open		
	[Settings]	50 mV/division 5 ms/division DC mode	● Disc	YEDS-7		


- 1. Move the pickup to midway across the disc (R=35 mm) with the TRACK/MANUAL SEARCH FWD ▷▷ ▷▷ or REV | □□ □□ key.
- 2. Press the PGM (PROGRAM) key, then the PLAY > key in that order to close the focus servo then the spindle servo.
- 3. Line up the bright line (ground) at the center of the oscilloscope screen and put the oscilloscope into DC mode.
- 4. Supposing that the positive amplitude of the tracking error signal at TP1, pin 2 (TRK ERR) is (A) and the negative amplitude is (B), the following expression is satisfied.

$$A \ge B : \frac{A - B}{C} \times \frac{1}{2} \le 0.1$$

$$A < B : \frac{B - A}{C} \times \frac{1}{2} \le 0.1$$

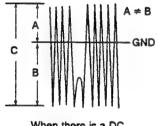

When there is a DC component

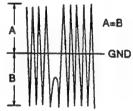


When there is no DC component



3. Pickup Radial/Tangential Tilt Adjustment

● Objective	To adjust the angle of the pickup relative to the disc so that the laser beams are shone straight down into the disc for the best read out of the RF signals.					
 Symptom when out of adjustment 	f Sound broken; some discs can be played but not others.					
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 1 (RF).		● Player state	Test mode, play		
	[Settings]	20 mV/division 200 ns/division AC mode	Adjustment location Disc	Pickup radial tilt adjustment screw and tangential tilt adjustment screw YEDS-7		

- 1. Press the TRACK/MANUAL SEARCH FWD ▷▷ ▷▷ or REV I ▷□ ▷□ key to move the pickup to halfway across the disc (R=35mm).
 - Press the PGM (PROGRAM) key, the PLAY \triangleright key, then the PAUSE [][] key in that order to close the respective servos and put the player into play mode.
- 2. First, adjust the radial tilt adjustment screw with a Phillips screwdriver so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly.
- 3. Next, adjust the tangential tilt adjustment screw with a Phillips screwdriver so that the eye pattern (the diamond shape at the center of the RF signal) can be seen the most clearly (Figure 3).
- 4. Adjust the radial tilt adjustment screw and the tangential tilt adjustment screw again so that the eye pattern can be seen the most clearly. As necessary, adjust the two screws alternately so that the eye pattern can be seen the most clearly.
- 5. When the adjustment is completed, lock the radial and tangential adjustment screw. Note:Radial and tangential mean the directions relative to the disc shown in Figure 2.

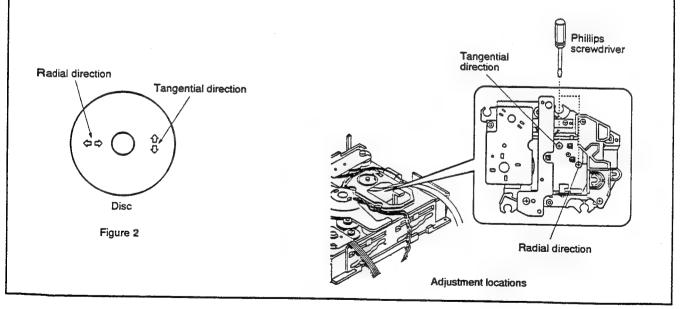



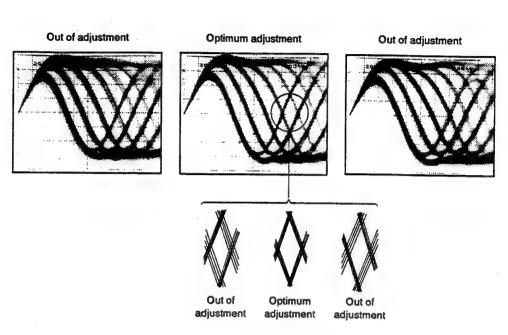


Figure 3 Eye pattern



4. RF Level Verification

Objective	To verify t	o verify the playback RF signal amplitude				
 Symptom when out of adjustment 	No play or	o play or no search				
Measurement instru- ment connections	Connect the oscilloscope to TP1, Pin 1 (RF).		● Player state	Test mode, play		
	[Settings]	50 mV/division 10 ms/division	● Adjustment location	None		
		AC mode	• Disc	YEDS-7		

- 1. Move the pickup to midway across the disc (R=35 mm) with the TRACK/MANUAL SEARCH FWD ▷▷ · ▷▷ or REV І □ · □ key, then press the PGM (PROGRAM) key, the PLAY ▷ key, then the PAUSE [] key in that order to close the respective servos and put the player into play mode.
- 2. Verify the RF signal amplitude is 1.2 Vp-p \pm 0.2 V.



5. Focus Servo Loop Gain Adjustment

● Objective	To optimize the focus servo loop gain.						
Symptom when out of adjustment	Playback does not start or focus actuator noisy.						
Measurement instru- ment connections	See figure 4. [Settings]	● Player state	Test mode, play				
	CH1 CH2 20 mV/division 5 mV/division	● Adjustment location	VR152 (FCS. GAN)				
	X-Y mode	● Disc	YEDS-7				

[Procedure]

- 1. Set the AF generator output to 1.2 kHz and 1 Vp-p.
- 2. Press the TRACK/MANUAL SEARCH FWD >> >> or REV | <> << key to move the pickup to halfway across the disc (R=35 mm), then press the PGM (PROGRAM) key, the PLAY >> key, then the PAUSE | || key in that order to close the corresponding servos and put the player into play mode.
- 3. Adjust VR152 (FCS. GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.



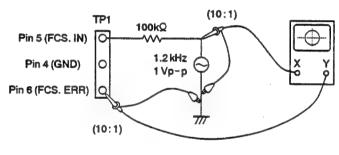


Figure 4


Focus Gain Adjustment

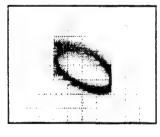

Higher gain

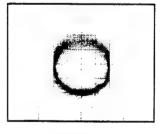

Optimum gain

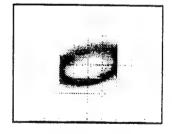


Lower gain




6. Tracking Servo Loop Gain Adjustment

● Objective	To optimize the tracking servo loop gain.					
Symptom when out of adjustment	Playback does not start, during sea	arches the actuator is nois	sy, or tracks are skipped.			
Measurement instru- ment connections	See Figure 5.	Player state	Test mode, play			
	[Settings] CH1 CH2	● Adjustment location	VR151 (TRK. GAN)			
	50 mV/division 20 mV/division X-Y mode	• Disc	YEDS-7			

- 1. Set the AF generator output to 1.2 kHz and 2 Vp-p.
- 2. Press the TRACK/MANUAL SEARCH FWD DD DD or REV DD o
- 3. Adjust VR151 (TRK. GAN) so that the Lissajous waveform is symmetrical about the X axis and the Y axis.

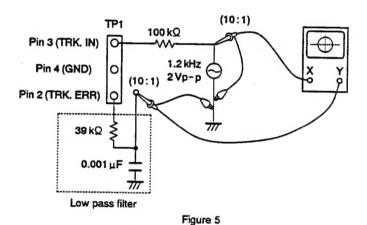


Tracking Gain Adjustment

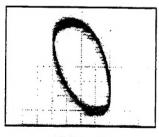

Higher gain



Optimum gain

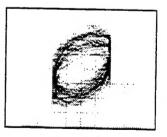

Lower gain

PD-M601, PD-M551, PD-M501

● MOTHER BOARD ASSEMBLY (PWM1582 and PWM1579)

PWM1582, PWM1579 and PWM1583 have the same construction except for the following:


Mark	Symbol & Description				
IVIAIR	Symbol & Description	PWM1583	PWM1582	PWM1579	Remarks
	IC405	NJM4565D-D	NJM4558D-D	NJM4558D-D	
	IC406	BA15218	••••	• • • • •	
	D391	1SS254	1\$\$254	••••	
	C433, 434 (22 μ /25V)	PCH1107	****	••••	
	C433, 434	••••	CEAS220M25	CEAS220M25	
	R445, 446	RD1/6PM271J	RD1/6PM681J	. RD1/6PM681J	
	R447, 448	RD1/6PM471J	••••	• • • • •	
	R470, 471	RD1/6PM470J	••••		1
	CN351 (32P FFC connector)	HLEM32S-1	HLEM32S-1	• • • • •	l
	CN351 (30P FFC connector)	****	••••	HLEM30S-1	

FUNCTION BOARD ASSEMBLY

Function board assembly of PD - M551 and PD - M501 and Function board assembly of PD - M601 have the same construction except for the following:

Mark	Symbol & Description	Part No.			
		PD-M601	PD-M551	PD-M501	Remarks
	CN701 (32P FFC connector) CN701 (30P FFC connector) Remote sensor	HLEM32R-1 ••••• SBX1610-51	HLEM32R - 1 SBX1610-51	HLEM30R-1	


10. PANEL FACILITIES

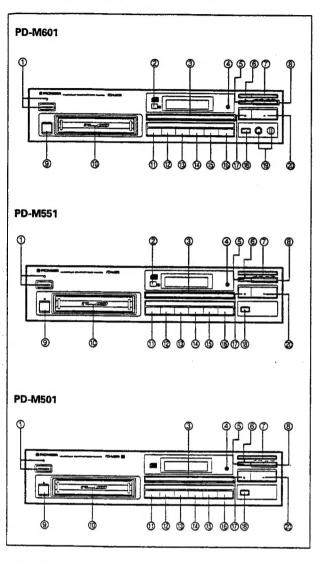

FRONT PANEL

- ① POWER STANDBY/ON switch and STANDBY indicator
- ② Remote sensor (PD-M601/PD-M551 only)
 Receives the signal from the remote control unit.
 - The PD-M501 is not equipped with the remote sensor.
- 3 Disc number buttons (DISC 1 DISC 6)
- 4 TIME button
- ⑤ Stop button (3)
- **6** REPEAT button
- 7 RANDOM PLAY button
- ® Track/Manual search buttons (I◄◄ ◄◄/►► ►►)
- ⑤ EJECT button (▲)
- 10 Magazine insertion slot
- 1 PROGRAM button
- 12 DELETE button

- **(3) AUTO FADER button**
- (14) HI-LITE SCAN button
- **15 COMPU PGM EDIT button**
- **16 TIME FADE EDIT button**
- 1 Pause button (II)
- (B) ADLC (Automatic Digital Level Controller) button
- (9) Headphones jack (PHONES) and headphones volume control (PHONES LEVEL) (PD-M601 only)
- ② Play button (►)

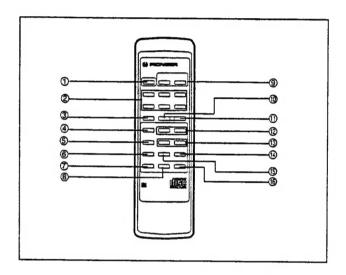

REMOTE CONTROL UNIT (PD-M601/PD-M551 only)

Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

- 1 POWER button
- ② DISC NUMBER buttons (1-6)
- ③ STOP button (■)
- **4** RANDOM PLAY button
- **⑤ HI-LITE SCAN button**
- 6 FADER button
- ADLC (Automatic Digital Level Controller)
 button
- **® CHECX button**
- OUTPUT LEVEL buttons (+/-)
- 10 PAUSE button (11)
- ① PLAY button (►)
- ③ TRACK search buttons (► / ►)
- **14** DELETE button
- (5) PGM (program) button
- **(16)** CLEAR button

11. SPECIFICATIONS

1. General Type Compact disc digital audio system Power requirements U.K. and Australian modelsAC 220 - 240 V, 60 Hz U.S. and Canadian modelsAC 120 V, 60 Hz Other modelsAC 110 - 127V/220 - 240 V (switchable), Power consumption U.S. and Canadian models12 W U.K., Australian and other models14 W Operating temperature +5°C - +35°C (+41°F - +95°F) Weight 3.8 kg (8 lb, 6 oz) External dimensions PD-M601/PD-551420 (W) X 291(D) X 105 (H) mm 16-9/16 (W) X11-7/16 (D) X 4-1/8 (H) in420 (W) X 291(D) X 100 (H) mm 16-9/16 (W) X 11-7/16 (D) X 3-15/16 (H) in 2. Audio section Frequency response 2 Hz - 20 kHz S/N ratio 102 dB or more (EIAJ) Harmonic distortion 0.003% or less (EIAJ) Output voitage 2.0V

Wow and flutter Limit of mesurement

Channels 2-channel (stereo)

±0.001% W₂PEAK) or less (EIAJ)

3. Output terminal

Audio line output

Headphone jack with volume control (PD-M601/PD-M551 only)
Control input/output jacks (available with the PD-M551/PD-M501 and U.S. and Canadian models of the PD-M601)
CD-DECK SYNCHRO jack

4. Accessories

-		
•	Remote control unit (PD-M601/PD-M551 only)	I
•	Size AAA/R03/dry batteries	
	(PD-M601/PD-M551 only)	2
•	Six-compact-disc magazine	١
•	Control cord (provided with PD-M551/PD-M501	
	and U.S. and Canadian models of PD-M601 only)	١
•	Output cord	į
•	Operating instructions	1

NOTE:

Specifications and design subject to possible modification without notice, due to improvements.

The Magazine Type Multi-Play CD Players with (2020) mark and the Magazines with the same mark are compatible for 5-inch (12cm) discs.